



## HBS-2028DAS Column Type Semi-Auto Bandsaw

HBS-2028DAS... 50000352T .... 3~400V, 50Hz

### PARTS LIST



**JPW Tool Group Hong Kong Limited**  
98 Granville Road, Tsimshatsui East, Kowloon, Hong Kong, PRC  
[www.jettools.com](http://www.jettools.com)

**Импортёр в РФ: ООО «ИТА Технолоджи»**  
105082, Москва, Переведеновский пер., д. 17  
[www.jettools.ru](http://www.jettools.ru)


Made in Taiwan / Сделано на Тайване

P-50000352T

2024-02

**HBS-2028DAS Stand Assembly**

**SECTION A**

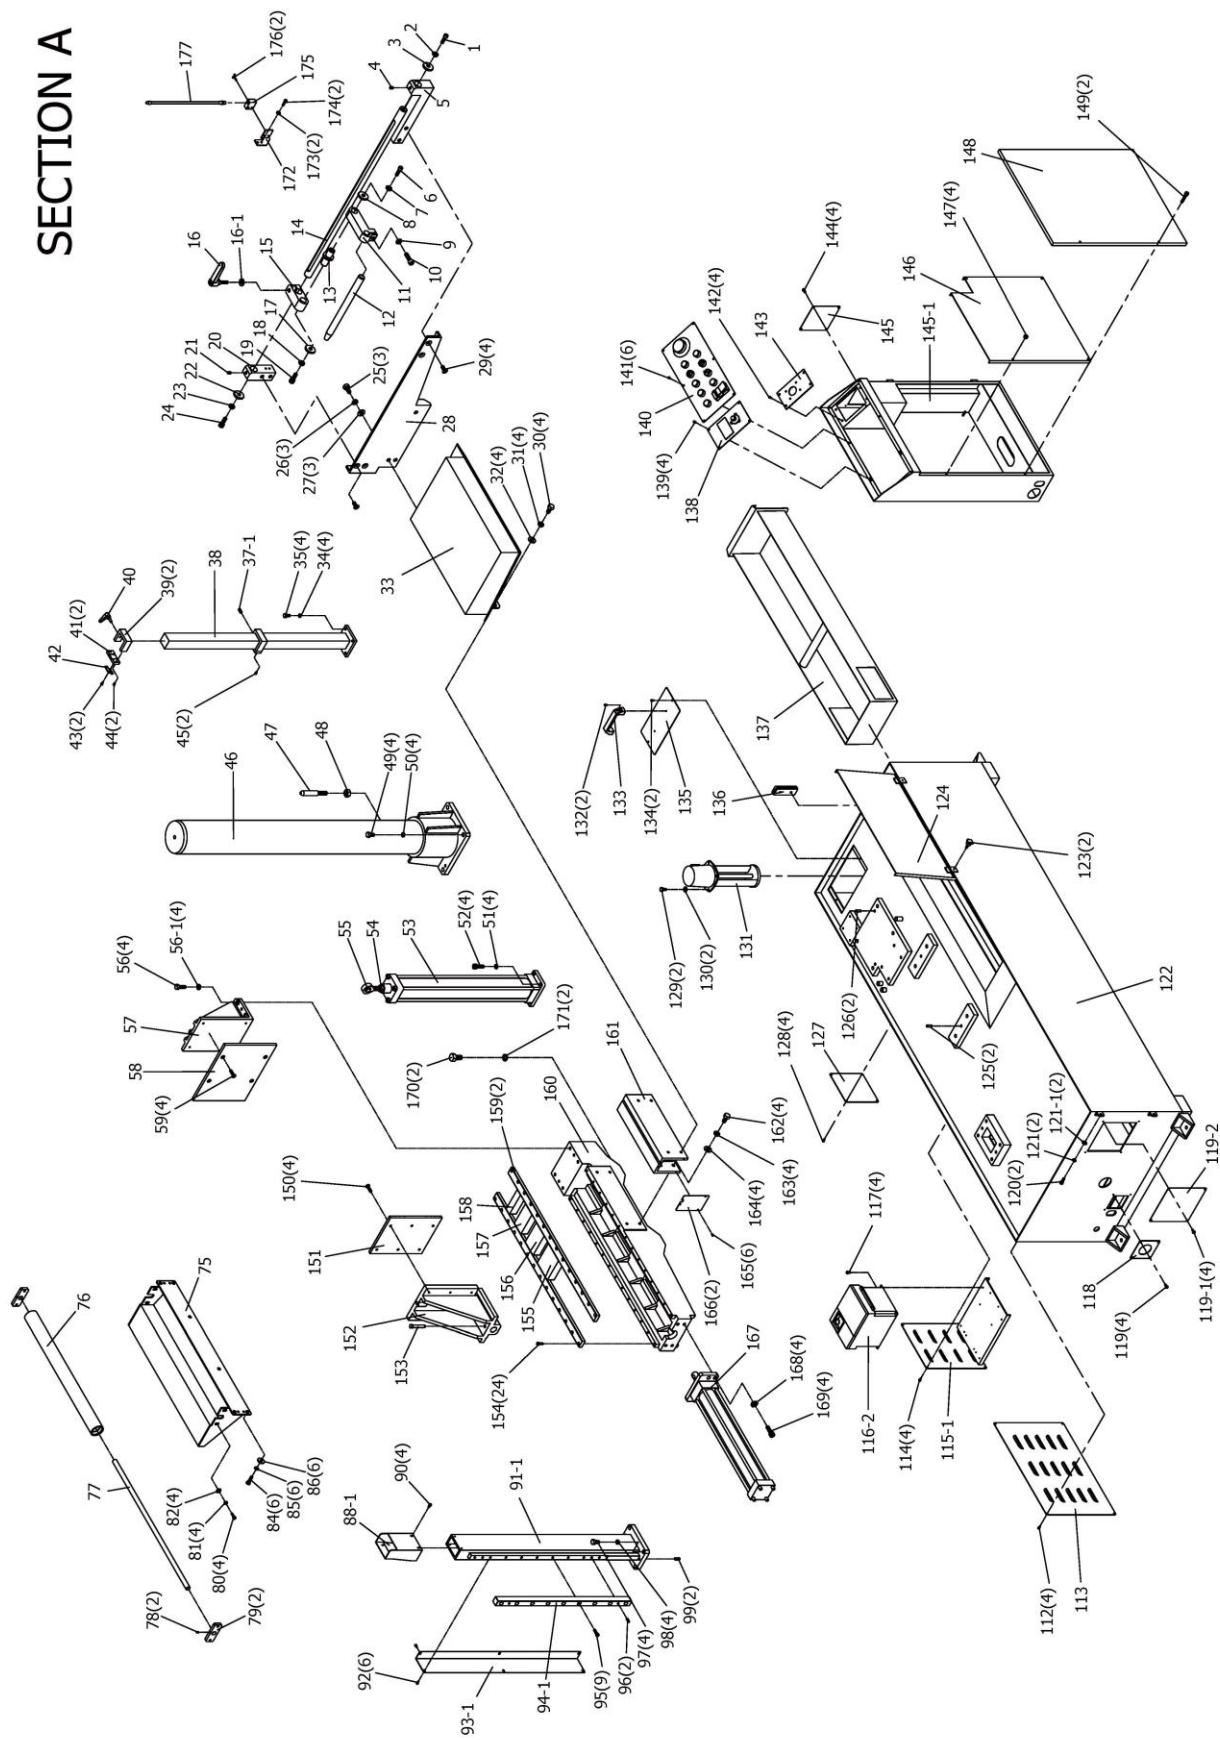


## HBS-2028DAS Stand Assembly

| <b>Index No.</b> | <b>Part No.</b>       | <b>Description</b>             | <b>Size</b>         | <b>Q'ty</b> |
|------------------|-----------------------|--------------------------------|---------------------|-------------|
| A1.....          | TS-0209051E .....     | Hex. Socket Cap Screw .....    | 3/8"x1" L .....     | 1           |
| A2.....          | HBS-2028DAS-A2 .....  | Spring Washer .....            | 3/8" .....          | 1           |
| A3.....          | HBS-2028DAS-A3 .....  | Washer .....                   | 3/8" .....          | 1           |
| A4.....          | TS-0270021E .....     | Set Screw .....                | 5/16"x5/16" L ..... | 1           |
| A5.....          | HBS-2028DAS-A5 .....  | Length Rod Right Bracket ..... | .....               | 1           |
| A6.....          | TS-0209051E .....     | Hex. Socket Cap Screw .....    | 3/8"x1" L .....     | 1           |
| A7.....          | HBS-2028DAS-A7 .....  | Spring Washer .....            | 3/8" .....          | 1           |
| A8.....          | HBS-2028DAS-A8 .....  | Washer .....                   | 3/8" .....          | 1           |
| A9.....          | HBS-2028DAS-A9 .....  | Spring Washer .....            | 3/8" .....          | 1           |
| A10.....         | TS-0209051E .....     | Hex. Socket Cap Screw .....    | 3/8"x1" L .....     | 1           |
| A11.....         | HBS-2028DAS-A11 ..... | Stopper Bracket .....          | .....               | 1           |
| A12.....         | HBS-2028DAS-A12 ..... | Length Stopper .....           | .....               | 1           |
| A13.....         | HBS-2028DAS-A13 ..... | Welding Rod .....              | .....               | 1           |
| A14.....         | HBS-2028DAS-A14 ..... | Length Rod .....               | .....               | 1           |
| A15.....         | HBS-2028DAS-A15 ..... | Length Setting Bracket .....   | .....               | 1           |
| A16.....         | HBS-2028DAS-A16 ..... | Handle .....                   | 3/8"x30L .....      | 1           |
| A16-1....        | HBS-2028DAS-A16-1 ... | Washer .....                   | 3/8" .....          | 1           |
| A17.....         | HBS-2028DAS-A17 ..... | Washer .....                   | 3/8" .....          | 1           |
| A18.....         | HBS-2028DAS-A18 ..... | Spring Washer .....            | 3/8" .....          | 1           |
| A19.....         | TS-0209051E .....     | Hex. Socket Cap Screw .....    | 3/8"x1" L .....     | 1           |
| A20.....         | HBS-2028DAS-A20 ..... | Length Rod Left Bracket .....  | .....               | 1           |
| A21.....         | TS-0270021 .....      | Set Screw .....                | 5/16"x5/16" L ..... | 1           |
| A22.....         | HBS-2028DAS-A22 ..... | Washer .....                   | .....               | 1           |
| A23.....         | HBS-2028DAS-A23 ..... | Spring Washer .....            | 3/8" .....          | 1           |
| A24.....         | TS-0209051E .....     | Hex. Socket Cap Screw .....    | 3/8"x1" L .....     | 1           |
| A25.....         | TS-1491031E .....     | Hex. Cap Bolt .....            | M10x25L .....       | 3           |
| A26.....         | HBS-2028DAS-A26 ..... | Spring Washer .....            | M10 .....           | 3           |
| A27.....         | HBS-2028DAS-A27 ..... | Washer .....                   | M10 .....           | 3           |
| A28.....         | HBS-2028DAS-A28 ..... | Side Plate .....               | .....               | 1           |
| A29.....         | TS-0246031E .....     | Flat Head Screw .....          | 5/16"x3/4" L .....  | 4           |
| A30.....         | HBS-2028DAS-A30 ..... | Hex. Cap Bolt .....            | M12x20L .....       | 4           |
| A31.....         | HBS-2028DAS-A31 ..... | Spring Washer .....            | M12 .....           | 4           |
| A32.....         | HBS-2028DAS-A32 ..... | Washer .....                   | M12 .....           | 4           |
| A33.....         | HBS-2028DAS-A33 ..... | Work Out Table .....           | .....               | 1           |
| A34.....         | HBS-2028DAS-A34 ..... | Spring Washer .....            | M8 .....            | 4           |
| A35.....         | TS-1504051E .....     | Hex. Socket Cap Screw .....    | M8x25L .....        | 4           |
| A37-1....        | TS-1524011E .....     | Set Screw .....                | M8x8L .....         | 1           |
| A38.....         | HBS-2028DAS-A38 ..... | Scale Rod .....                | .....               | 1           |
| A39.....         | HBS-2028DAS-A39 ..... | Limit Adjusting Block .....    | .....               | 2           |
| A40.....         | HBS-2028DAS-A40 ..... | Adjustable Handle .....        | .....               | 1           |
| A41.....         | HBS-2028DAS-A41 ..... | Cover Plate .....              | .....               | 2           |
| A42.....         | HBS-2028DAS-A42 ..... | Upper Limit indicator .....    | .....               | 1           |
| A43.....         | HBS-2028DAS-A43 ..... | Button Head Socket Screw ..... | M5x8L .....         | 2           |
| A44.....         | TS-2246202E .....     | Button Head Socket Screw ..... | M6x20L .....        | 2           |
| A45.....         | TS-2246202E .....     | Button Head Socket Screw ..... | M6x20L .....        | 2           |
| A46.....         | HBS-2028DAS-A46 ..... | Big Column .....               | .....               | 1           |
| A47.....         | HBS-2028DAS-A47 ..... | Supporting Copper .....        | .....               | 1           |
| A48.....         | HBS-2028DAS-A48 ..... | Nut .....                      | M16 .....           | 1           |
| A49.....         | HBS-2028DAS-A49 ..... | Steel Hex. Cap Bolt .....      | M16x45L .....       | 4           |
| A50.....         | HBS-2028DAS-A50 ..... | Spring Washer .....            | M16 .....           | 4           |
| A51.....         | HBS-2028DAS-A51 ..... | Spring Washer .....            | M12 .....           | 4           |
| A52.....         | TS-1506031E .....     | Hex. Socket Cap Screw .....    | M12x30L .....       | 4           |
| A53.....         | HBS-2028DAS-A53 ..... | Lift Cylinder .....            | .....               | 1           |
| A54.....         | HBS-2028DAS-A54 ..... | Nut .....                      | M20xP1.5 .....      | 1           |
| A55.....         | HBS-2028DAS-A55 ..... | Universal Joint .....          | .....               | 1           |
| A56.....         | HBS-2028DAS-A56 ..... | Steel Hex. Cap Bolt .....      | M14x35L .....       | 1           |
| A56-1....        | TS-2361141E .....     | Spring Washer .....            | M14 .....           | 4           |
| A57.....         | HBS-2028DAS-A57 ..... | Rear Vise .....                | .....               | 1           |
| A58.....         | HBS-2028DAS-A58 ..... | Rear Vise Steel Plate .....    | .....               | 1           |

| <b>Index No.</b> | <b>Part No.</b>          | <b>Description</b>              | <b>Size</b>              | <b>Q'ty</b> |
|------------------|--------------------------|---------------------------------|--------------------------|-------------|
| A59.....         | TS-1515041E .....        | Flat Head Screw .....           | M8x30L.....              | 4           |
| A75.....         | HBS-2028DAS-A75 .....    | Roller Holder .....             | .....                    | 1           |
| A76.....         | HBS-2028DAS-A76 .....    | Auxiliary Roller.....           | .....                    | 1           |
| A77.....         | HBS-2028DAS-A77 .....    | Auxiliary Shaft.....            | .....                    | 1           |
| A78.....         | TS-2276081E .....        | Set Screw.....                  | M6x8L .....              | 2           |
| A79.....         | HBS-2028DAS-A79 .....    | Roller Setting Bracket .....    | .....                    | 2           |
| A80.....         | TS-1505021 .....         | Hex. Socket Cap Screw .....     | M10x20L.....             | 4           |
| A81.....         | HBS-2028DAS-A81 .....    | Spring Washer.....              | M10 .....                | 4           |
| A82.....         | HBS-2028DAS-A82 .....    | Washer.....                     | M10 .....                | 4           |
| A84.....         | HBS-2028DAS-A84 .....    | Hex. Cap Bolt .....             | M12x20L.....             | 6           |
| A85.....         | HBS-2028DAS-A85 .....    | Spring Washer.....              | M12 .....                | 6           |
| A86.....         | HBS-2028DAS-A86 .....    | Washer.....                     | M12 .....                | 6           |
| A88-1.....       | HBS-2028DAS-A88-1 .....  | Cover Bracket.....              | .....                    | 1           |
| A90.....         | HBS-2028DAS-A90 .....    | Big Round Head Screw.....       | M6x8L .....              | 4           |
| A91-1.....       | HBS-2028DAS-A91-1 .....  | Small Column .....              | .....                    | 1           |
| A92.....         | HBS-2028DAS-A92 .....    | Big Round Head Screw.....       | M6x8L .....              | 6           |
| A93-1.....       | HBS-2028DAS-A93-1 .....  | Cover .....                     | .....                    | 1           |
| A94-1.....       | HBS-2028DAS-A94-1 .....  | Guide Block .....               | .....                    | 1           |
| A95.....         | TS-1505031E .....        | Hex. Socket Cap Screw .....     | M10x25L.....             | 9           |
| A96.....         | HBS-2028DAS-A96 .....    | Spring Pin.....                 | M8x20L.....              | 2           |
| A97.....         | HBS-2028DAS-A97 .....    | Steel Hex. Cap Bolt .....       | M14x45L.....             | 4           |
| A98.....         | HBS-2028DAS-A98 .....    | Spring Washer.....              | M14x45L.....             | 4           |
| A99.....         | HBS-2028DAS-A99 .....    | Spring Pin.....                 | M10x30L.....             | 2           |
| A112.....        | TS-2246082E .....        | Button Head Socket Screw .....  | M6x8L .....              | 4           |
| A113.....        | HBS-2028DAS-A113 .....   | Hydraulic Unit Cover .....      | .....                    | 1           |
| A114.....        | TS-2246082E .....        | Button Head Socket Screw .....  | M6x8L .....              | 4           |
| A115-1.....      | HBS-2028DAS-A115-1 ..... | Inverter Bracket .....          | .....                    | 1           |
| A116-2.....      | HBS-2028DAS-A116-2 ..... | Inverter .....                  | 5.6kW, 400V .....        | 1           |
| A117.....        | HBS-2028DAS-A117 .....   | Round Head Screw .....          | M5x8L .....              | 4           |
| A118.....        | HBS-2028DAS-A118 .....   | Wire Fixing Plate .....         | .....                    | 1           |
| A119.....        | HBS-2028DAS-A119 .....   | Button Head Socket Screw .....  | M5x8L .....              | 4           |
| A119-1.....      | HBS-2028DAS-A119-1 ..... | Button Head Socket Screw .....  | M5x8L .....              | 4           |
| A119-2.....      | HBS-2028DAS-A119-2 ..... | Base A Sealing Plate .....      | .....                    | 1           |
| A120.....        | TS-1504031E .....        | Hex. Socket Cap Screw .....     | M8x16 .....              | 2           |
| A121.....        | HBS-2028DAS-A121 .....   | Spring Washer .....             | M8 .....                 | 2           |
| A121-1.....      | HBS-2028DAS-A121-1 ..... | Washer .....                    | M8 .....                 | 2           |
| A122.....        | HBS-2028DAS-A122 .....   | Machine Base .....              | .....                    | 1           |
| A123.....        | HBS-2028DAS-A123 .....   | Thumb Screw .....               | M6x12L.....              | 2           |
| A124.....        | HBS-2028DAS-A124 .....   | Coolant Plate .....             | .....                    | 1           |
| A125.....        | HBS-2028DAS-A125 .....   | Spring Pin .....                | M10x30L.....             | 2           |
| A126.....        | HBS-2028DAS-A126 .....   | Spring Pin .....                | M10x30L.....             | 2           |
| A127.....        | HBS-2028DAS-A127 .....   | Small Cover .....               | .....                    | 1           |
| A128.....        | TS-2246082E .....        | Button Head Socket Screw .....  | M6x8L .....              | 4           |
| A129.....        | HBS-2028DAS-A129 .....   | Spring Washer .....             | M6 .....                 | 2           |
| A130.....        | TS-1482031E .....        | Hex. Cap Bolt .....             | M6x16L.....              | 2           |
| A131.....        | HBS-2028DAS-A131 .....   | Coolant Pump .....              | 0.12kW, 400V, 3 Ph ..... | 1           |
| A132.....        | TS-1534042E .....        | Big Round Head Screw .....      | M6x12L.....              | 2           |
| A133.....        | HBS-2028DAS-A133 .....   | Bending Handle .....            | .....                    | 1           |
| A134.....        | HBS-2028DAS-A134 .....   | Big Round Head Screw .....      | M6x8L .....              | 2           |
| A135.....        | HBS-2028DAS-A135 .....   | Coolant Cover .....             | .....                    | 1           |
| A136.....        | HBS-2028DAS-A136 .....   | Oil Gauge .....                 | .....                    | 1           |
| A137.....        | HBS-2028DAS-A137 .....   | Chip Collector .....            | .....                    | 1           |
| A138.....        | HBS-2028DAS-A138 .....   | Blade Speed Control Panel ..... | .....                    | 1           |
| A139.....        | HBS-2028DAS-A139 .....   | Button Head Socket Screw .....  | M5x8L .....              | 4           |
| A140.....        | HBS-2028DAS-A140 .....   | Control Panel .....             | .....                    | 1           |
| A141.....        | HBS-2028DAS-A141 .....   | Button Head Socket Screw .....  | M5x8L .....              | 6           |
| A142.....        | TS-2246082E .....        | Button Head Socket Screw .....  | M6x8L .....              | 4           |
| A143.....        | HBS-2028DAS-A143 .....   | Flow Control Plate .....        | .....                    | 1           |
| A144.....        | HBS-2028DAS-A144 .....   | Button Head Socket Screw .....  | M5x8L .....              | 4           |
| A145.....        | HBS-2028DAS-A145 .....   | Electric Box Cover .....        | .....                    | 1           |
| A145-1.....      | HBS-2028DAS-A145-1 ..... | Electric Box .....              | .....                    | 1           |
| A146.....        | HBS-2028DAS-A146 .....   | Bottom Plate .....              | .....                    | 1           |

| <b>Index No.</b> | <b>Part No.</b>        | <b>Description</b>                    | <b>Size</b>          | <b>Q'ty</b> |
|------------------|------------------------|---------------------------------------|----------------------|-------------|
| A147.....        | HBS-2028DAS-A147 ..... | Nut .....                             | M10 .....            | 4           |
| A148.....        | HBS-2028DAS-A148 ..... | Cabinet Door .....                    | .....                | 1           |
| A149.....        | TS-1503071E .....      | Hex. Socket Cap Screw .....           | M6x30L.....          | 2           |
| A150.....        | TS-1515041E .....      | Flat Head Screw .....                 | M8x30L.....          | 4           |
| A151.....        | HBS-2028DAS-A151 ..... | Front Vise Plate .....                | .....                | 1           |
| A152.....        | HBS-2028DAS-A152 ..... | Front Vise .....                      | .....                | 1           |
| A153.....        | HBS-2028DAS-A153 ..... | Front Vise Pin .....                  | .....                | 1           |
| A154.....        | TS-1504041E .....      | Hex. Socket Cap Screw .....           | M8x20L.....          | 24          |
| A155.....        | HBS-2028DAS-A155 ..... | Cutting Supporter (2) .....           | .....                | 1           |
| A156.....        | HBS-2028DAS-A156 ..... | Cutting Supporter (3) .....           | .....                | 1           |
| A157.....        | HBS-2028DAS-A157 ..... | Cutting Supporter (4) .....           | .....                | 1           |
| A158.....        | HBS-2028DAS-A158 ..... | Cutting Supporter (5) .....           | .....                | 1           |
| A159.....        | HBS-2028DAS-A159 ..... | Base Plate .....                      | .....                | 2           |
| A160.....        | HBS-2028DAS-A160 ..... | Vise Base .....                       | .....                | 1           |
| A161.....        | HBS-2028DAS-A161 ..... | Bracket .....                         | .....                | 1           |
| A162.....        | TS-1492031E .....      | Hex. Cap Bolt .....                   | M12x35L.....         | 4           |
| A163.....        | HBS-2028DAS-A163 ..... | Spring Washer .....                   | M12 .....            | 4           |
| A164.....        | HBS-2028DAS-A164 ..... | Washer .....                          | M12 .....            | 4           |
| A165.....        | HBS-2028DAS-A165 ..... | Button Head Socket Screw .....        | M5x6L .....          | 6           |
| A166.....        | HBS-2028DAS-A166 ..... | Cover .....                           | .....                | 2           |
| A167.....        | HBS-2028DAS-A167 ..... | Vise Cylinder .....                   | .....                | 1           |
| A168.....        | HBS-2028DAS-A168 ..... | Spring Washer .....                   | M14 .....            | 4           |
| A169.....        | HBS-2028DAS-A169 ..... | Hex. Socket Cap Screw .....           | M14x40L.....         | 4           |
| A170.....        | HBS-2028DAS-A170 ..... | Steel Hex. Cap Bolt .....             | M14x40L.....         | 2           |
| A171.....        | HBS-2028DAS-A171 ..... | Spring Washer .....                   | M14 .....            | 2           |
| A172.....        | HBS-2028DAS-A172 ..... | Water Jet Pipe Seat Fixed Plate ..... | .....                | 1           |
| A173.....        | TS-2361061E .....      | Spring Washer .....                   | M6 .....             | 2           |
| A174.....        | TS-1503041E .....      | Hex. Socket Cap Screw .....           | M6x16L.....          | 2           |
| A175.....        | HBS-2028DAS-A175 ..... | Water Jet Pipe Seat .....             | .....                | 1           |
| A176.....        | HBS-2028DAS-A176 ..... | Wing Bolt .....                       | M6x30L.....          | 2           |
| A177.....        | HBS-2028DAS-A177 ..... | Oil Injection Pipe .....              | SP103-1/4"x30" ..... | 1           |

## **HBS-2028DAS Bow Assembly**

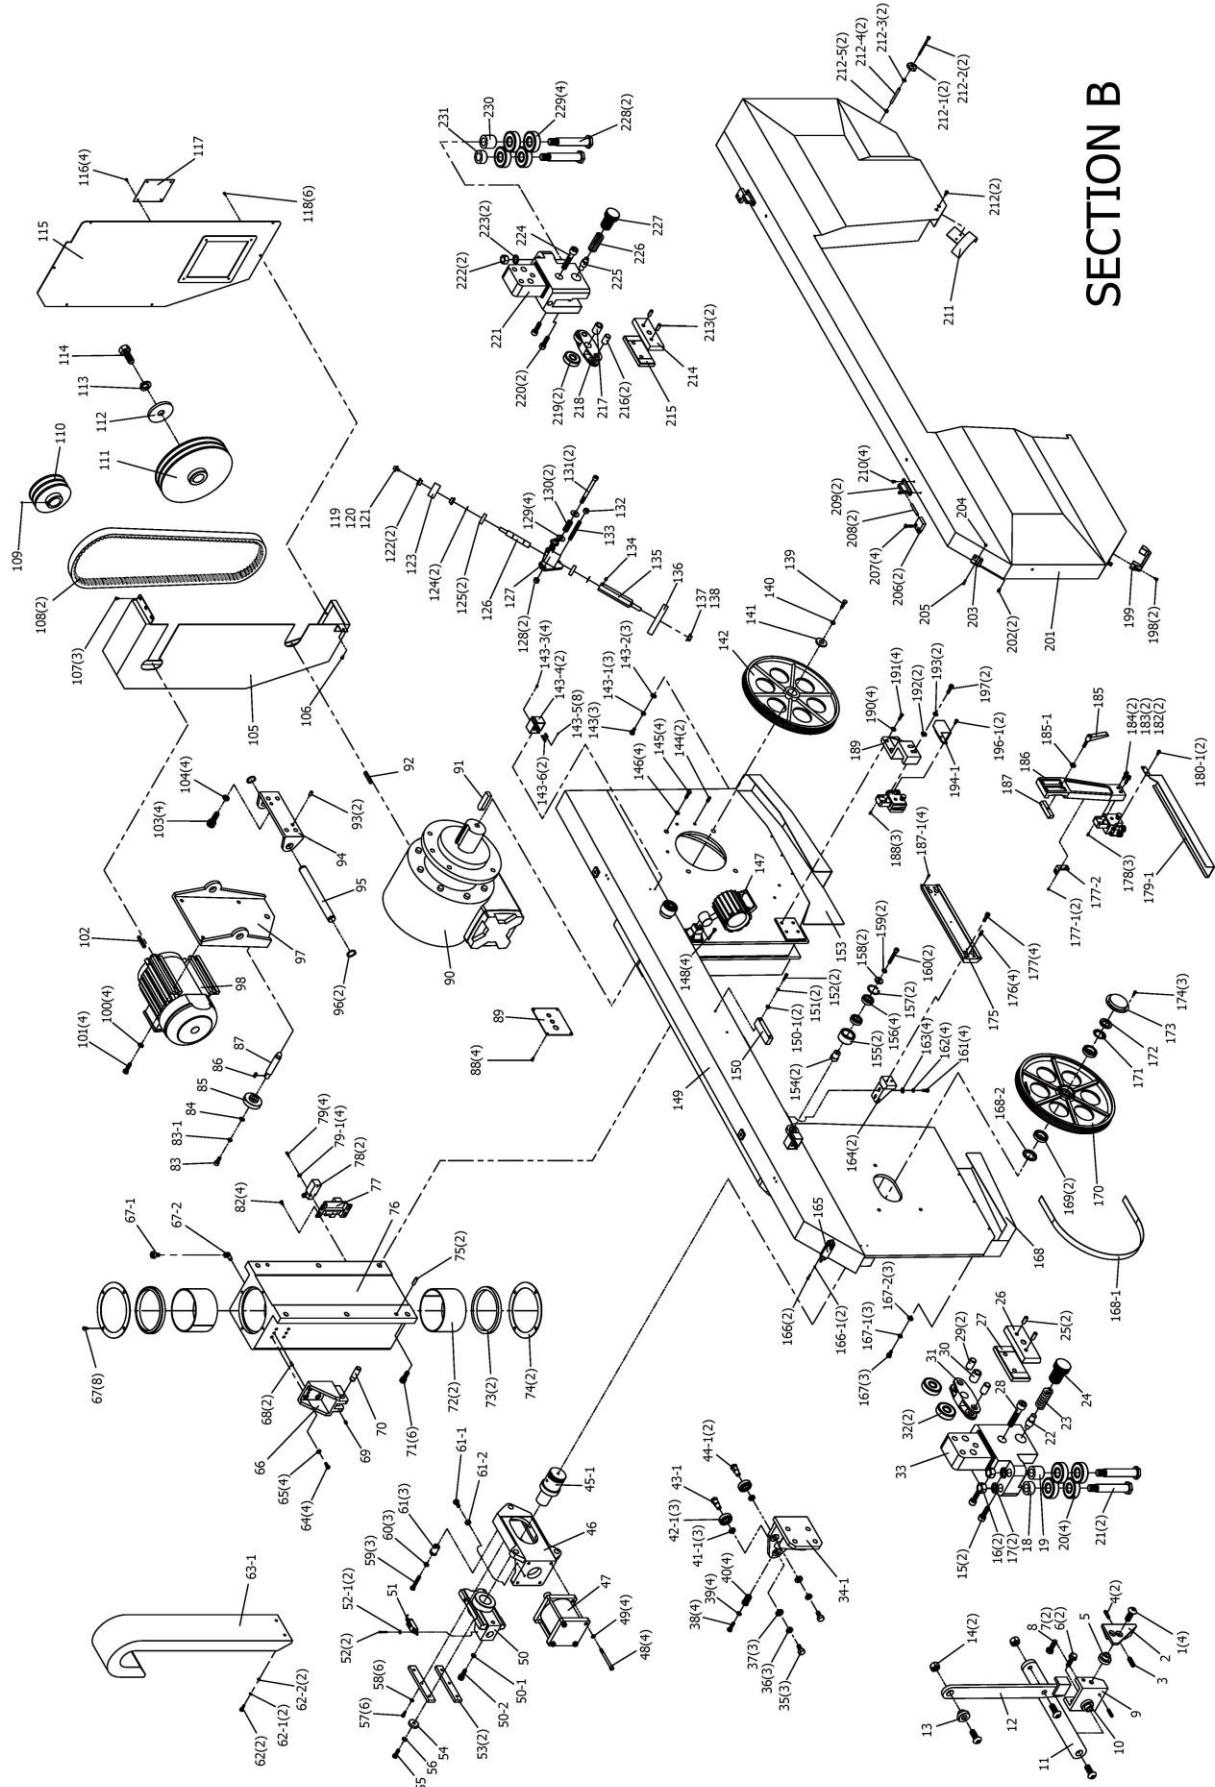

## HBS-2028DAS Bow Assembly

| <b>Index No.</b> | <b>Part No.</b>         | <b>Description</b>               | <b>Size</b>    | <b>Q'ty</b> |
|------------------|-------------------------|----------------------------------|----------------|-------------|
| B1.....          | TS-2248252E .....       | Button Head Socket Screw .....   | M8x25L.....    | 4           |
| B2.....          | HBS-2028DAS-B2 .....    | Position Lock .....              | .....          | 1           |
| B3.....          | HBS-2028DAS-B3 .....    | Spring.....                      | .....          | 1           |
| B4.....          | TS-1521051 .....        | Set Screw.....                   | M4x12L.....    | 2           |
| B5.....          | HBS-2028DAS-B5 .....    | Cap .....                        | .....          | 1           |
| B6.....          | TS-2208201E .....       | Hex. Cap Bolt .....              | M8x20L.....    | 2           |
| B7.....          | HBS-2028DAS-B7 .....    | Spring Washer.....               | M8 .....       | 2           |
| B8.....          | TS-2208201E .....       | Hex. Cap Bolt .....              | M8x20L.....    | 1           |
| B9.....          | HBS-2028DAS-B9 .....    | Fixing Bracket.....              | .....          | 1           |
| B10.....         | HBS-2028DAS-B10 .....   | Cap .....                        | .....          | 1           |
| B11.....         | HBS-2028DAS-B11 .....   | Long Arm.....                    | .....          | 1           |
| B12.....         | HBS-2028DAS-B12 .....   | Short Arm.....                   | .....          | 1           |
| B13.....         | HBS-2028DAS-B13 .....   | Cap .....                        | .....          | 1           |
| B14.....         | HBS-2028DAS-B14 .....   | Nut .....                        | M8 .....       | 2           |
| B15.....         | TS-1503051E .....       | Hex. Socket Cap Screw .....      | M6x20L.....    | 2           |
| B16.....         | HBS-2028DAS-B16 .....   | Nut .....                        | M10 .....      | 2           |
| B17.....         | HBS-2028DAS-B17 .....   | Spring Washer.....               | M10 .....      | 2           |
| B18.....         | HBS-2028DAS-B18 .....   | Bearing Bush.....                | .....          | 1           |
| B19.....         | HBS-2028DAS-B19 .....   | Bearing Bush (Long) .....        | .....          | 1           |
| B20.....         | BB-6201ZZE.....         | Ball Bearing .....               | 6201 .....     | 4           |
| B21.....         | HBS-2028DAS-B21 .....   | Bearing Shaft (Long) .....       | .....          | 2           |
| B22.....         | HBS-2028DAS-B22 .....   | Guide Pin .....                  | .....          | 1           |
| B23.....         | HBS-2028DAS-B23 .....   | Guide Spring .....               | .....          | 1           |
| B24.....         | HBS-2028DAS-B24 .....   | Guide Screw .....                | .....          | 1           |
| B25.....         | HBS-2028DAS-B25 .....   | Spring Pin .....                 | M5x12L.....    | 2           |
| B26.....         | HBS-2028DAS-B26 .....   | Carbide Guide (Left back) .....  | .....          | 1           |
| B27.....         | HBS-2028DAS-B27 .....   | Carbide Guide (Left front) ..... | .....          | 1           |
| B28.....         | TS-1504081E .....       | Hex. Socket Cap Screw .....      | M8x40L.....    | 1           |
| B29.....         | HBS-2028DAS-B29 .....   | Solid Pin .....                  | .....          | 2           |
| B30.....         | HBS-2028DAS-B30 .....   | Shaft Bush .....                 | .....          | 1           |
| B31.....         | HBS-2028DAS-B31 .....   | Bearing Bracket .....            | .....          | 1           |
| B32.....         | BB-6200ZZE.....         | Ball Bearing .....               | 6200 .....     | 2           |
| B33.....         | HBS-2028DAS-B33 .....   | Front Bearing Seat .....         | .....          | 1           |
| B34-1.....       | HBS-2028DAS-B34-1 ..... | Adjusting Bracket .....          | .....          | 1           |
| B35.....         | TS-1491041E .....       | Hex. Cap Bolt .....              | M10x30L.....   | 3           |
| B36.....         | HBS-2028DAS-B36 .....   | Spring Washer .....              | M10 .....      | 3           |
| B37.....         | HBS-2028DAS-B37 .....   | Washer .....                     | M10 .....      | 3           |
| B38.....         | HBS-2028DAS-B38 .....   | Steel Hex. Cap Bolt .....        | M14x45L.....   | 4           |
| B39.....         | HBS-2028DAS-B39 .....   | Spring Washer .....              | M14 .....      | 4           |
| B40.....         | HBS-2028DAS-B40 .....   | Adjusting Bush Screw .....       | .....          | 4           |
| B41-1.....       | HBS-2028DAS-B41-1 ..... | Adjusting Spacer .....           | .....          | 3           |
| B42-1.....       | BB-6304ZZE.....         | Bearing .....                    | 6304 .....     | 3           |
| B43-1.....       | HBS-2028DAS-B43-1 ..... | Eccentric Shaft .....            | .....          | 1           |
| B44-1.....       | HBS-2028DAS-B44-1 ..... | Adjusting Shaft .....            | .....          | 2           |
| B45-1.....       | HBS-2028DAS-B45-1 ..... | Front Wheel Shaft .....          | .....          | 1           |
| B46.....         | HBS-2028DAS-B46 .....   | Slider Seat .....                | .....          | 1           |
| B47.....         | HBS-2028DAS-B47 .....   | Blade Tension Cylinder .....     | .....          | 1           |
| B48.....         | HBS-2028DAS-B48 .....   | Hex. Socket Cap Screw .....      | M12x165L.....  | 4           |
| B49.....         | HBS-2028DAS-B49 .....   | Spring Washer .....              | M12 .....      | 4           |
| B50.....         | HBS-2028DAS-B50 .....   | Slide .....                      | .....          | 1           |
| B50-1.....       | TS-2361161E .....       | Spring Washer .....              | M16 .....      | 1           |
| B50-2.....       | HBS-2028DAS-B50-2 ..... | Hex. Socket Cap Screw .....      | M16x70L.....   | 1           |
| B51.....         | HBS-2028DAS-B51 .....   | Limit Switch .....               | AZD1001T ..... | 1           |
| B52.....         | TS-1501091E .....       | Hex. Socket Cap Screw .....      | M4x35L.....    | 2           |
| B52-1.....       | HBS-2028DAS-B52-1 ..... | Washer .....                     | M4 .....       | 2           |
| B53.....         | HBS-2028DAS-B53 .....   | Slider Guides .....              | .....          | 2           |
| B54.....         | HBS-2028DAS-B54 .....   | Washer .....                     | .....          | 1           |
| B55.....         | TS-1492021E .....       | Steel Hex. Cap Bolt .....        | M12x30L.....   | 1           |
| B56.....         | HBS-2028DAS-B56 .....   | Spring Washer .....              | M12 .....      | 1           |
| B57.....         | TS-1504051E .....       | Hex. Socket Cap Screw .....      | M8x25L.....    | 6           |


| <b>Index No.</b> | <b>Part No.</b>         | <b>Description</b>             | <b>Size</b>            | <b>Q'ty</b> |
|------------------|-------------------------|--------------------------------|------------------------|-------------|
| B58.....         | HBS-2028DAS-B58 .....   | Spring Washer.....             | M8 .....               | 6           |
| B59.....         | HBS-2028DAS-B59 .....   | Steel Hex. Cap Bolt .....      | M14x55L.....           | 3           |
| B60.....         | HBS-2028DAS-B60 .....   | Spring Washer .....            | M14 .....              | 3           |
| B61.....         | HBS-2028DAS-B61 .....   | Adjusting Screw .....          | .....                  | 3           |
| B61-1....        | TS-1490031E .....       | Hex. Cap Bolt .....            | M8x20L.....            | 1           |
| B61-2....        | TS-1540061E .....       | Nut .....                      | M8 .....               | 1           |
| B62.....         | TS-1503031E .....       | Hex. Socket Cap Screw .....    | M6x12L.....            | 2           |
| B62-1....        | TS-2361061E .....       | Spring Washer .....            | M6 .....               | 2           |
| B62-2....        | HBS-2028DAS-B62-2 ..... | Washer.....                    | M6 .....               | 2           |
| B63-1....        | HBS-2028DAS-B63-1 ..... | Guard Tube .....               | SQ812 .....            | 1           |
| B64.....         | TS-1506041 .....        | Hex. Socket Cap Screw .....    | M12x35L.....           | 4           |
| B65.....         | HBS-2028DAS-B65 .....   | Spring Washer.....             | M12 .....              | 4           |
| B66.....         | HBS-2028DAS-B66 .....   | Upper Bracket.....             | .....                  | 1           |
| B67.....         | TS-2246082E .....       | Button Head Socket Screw ..... | M6x8L .....            | 8           |
| B67-1....        | HBS-2028DAS-B67-1 ..... | Oil Cup .....                  | .....                  | 1           |
| B67-2....        | HBS-2028DAS-B67-2 ..... | 90° Elbow .....                | 1/8"x1/8" .....        | 1           |
| B68.....         | HBS-2028DAS-B68 .....   | Spring Pin.....                | M10x30L.....           | 2           |
| B69.....         | TS-1523011E .....       | Set Screw .....                | M6x6L .....            | 1           |
| B70.....         | HBS-2028DAS-B70 .....   | Shaft .....                    | .....                  | 1           |
| B71.....         | HBS-2028DAS-B71 .....   | Hex. Socket Cap Screw .....    | M14x30L.....           | 6           |
| B72.....         | HBS-2028DAS-B72 .....   | Oilless Bush .....             | .....                  | 2           |
| B73.....         | HBS-2028DAS-B73 .....   | Dust Seal .....                | .....                  | 2           |
| B74.....         | HBS-2028DAS-B74 .....   | Big Column Plate .....         | .....                  | 2           |
| B75.....         | HBS-2028DAS-B75 .....   | Solid Pin .....                | M12x30L.....           | 2           |
| B76.....         | HBS-2028DAS-B76 .....   | Column Sleeve .....            | .....                  | 1           |
| B77.....         | HBS-2028DAS-B77 .....   | Fixing Bracket .....           | .....                  | 1           |
| B78.....         | HBS-2028DAS-B78 .....   | Limit Switch .....             | .....                  | 2           |
| B79.....         | TS-1501091E .....       | Hex. Socket Cap Screw .....    | M4x35L.....            | 4           |
| B79-1....        | HBS-2028DAS-B79-1 ..... | Washer .....                   | M4 .....               | 4           |
| B82.....         | TS-2246122E .....       | Button Head Socket Screw ..... | M6x12L.....            | 4           |
| B83.....         | TS-1503031E .....       | Hex. Socket Cap Screw .....    | M6x12L.....            | 1           |
| B83-1....        | TS-2361061E .....       | Spring Washer .....            | M6 .....               | 1           |
| B84.....         | HBS-2028DAS-B84 .....   | Washer .....                   | M6 .....               | 1           |
| B85.....         | HBS-2028DAS-B85 .....   | Handle .....                   | .....                  | 1           |
| B86.....         | HBS-2028DAS-B86 .....   | Key .....                      | 4x4x10L .....          | 1           |
| B87.....         | HBS-2028DAS-B87 .....   | Adjusting Bolt .....           | .....                  | 1           |
| B88.....         | TS-2246082E .....       | Button Head Socket Screw ..... | M6x8L .....            | 4           |
| B89.....         | HBS-2028DAS-B89 .....   | Fixing Plate .....             | .....                  | 1           |
| B90.....         | HBS-2028DAS-B90 .....   | Worm Reducer .....             | .....                  | 1           |
| B91.....         | HBS-2028DAS-B91 .....   | Key .....                      | 20x12x50L .....        | 1           |
| B92.....         | HBS-2028DAS-B92 .....   | Key .....                      | 12x8x70L .....         | 1           |
| B93.....         | HBS-2028DAS-B93 .....   | Spring Pin .....               | 8x20L .....            | 2           |
| B94.....         | HBS-2028DAS-B94 .....   | Motor Fixing Bracket .....     | .....                  | 1           |
| B95.....         | HBS-2028DAS-B95 .....   | Shaft .....                    | .....                  | 1           |
| B96.....         | HBS-2028DAS-B96 .....   | C Ring .....                   | S-20 .....             | 2           |
| B97.....         | HBS-2028DAS-B97 .....   | Adjusting Bracket .....        | .....                  | 1           |
| B98.....         | HBS-2028DAS-B98 .....   | Motor .....                    | 5.6kW, 400V,3 Ph ..... | 1           |
| B100.....        | HBS-2028DAS-B100 .....  | Spring Washer .....            | M10 .....              | 4           |
| B101.....        | TS-1491041E .....       | Hex. Cap Bolt .....            | M10x30L .....          | 4           |
| B102.....        | HBS-2028DAS-B102 .....  | Key .....                      | 10x8x70L .....         | 1           |
| B103.....        | TS-1504041E .....       | Hex. Socket Cap Screw .....    | M8x20L .....           | 4           |
| B104.....        | HBS-2028DAS-B104 .....  | Spring Washer .....            | M8 .....               | 4           |
| B105.....        | HBS-2028DAS-B105 .....  | Pulley Guard .....             | .....                  | 1           |
| B106.....        | HBS-2028DAS-B106 .....  | Button Head Socket Screw ..... | M5x8L .....            | 1           |
| B107.....        | HBS-2028DAS-B107 .....  | Button Head Socket Screw ..... | M5x8L .....            | 3           |
| B108.....        | HBS-2028DAS-B108 .....  | Belt .....                     | 22-670C .....          | 2           |
| B109.....        | TS-1524011E .....       | Set Screw .....                | M8x8L .....            | 1           |
| B110.....        | HBS-2028DAS-B110 .....  | Motor Pulley .....             | .....                  | 1           |
| B111.....        | HBS-2028DAS-B111 .....  | Reducer Pulley .....           | .....                  | 1           |
| B112.....        | HBS-2028DAS-B112 .....  | Washer .....                   | .....                  | 1           |
| B113.....        | HBS-2028DAS-B113 .....  | Spring Washer .....            | M10 .....              | 1           |
| B114.....        | HBS-2028DAS-B114 .....  | Steel Hex. Cap Bolt .....      | .....                  | 1           |

| <b>Index No.</b> | <b>Part No.</b>          | <b>Description</b>             | <b>Size</b>      | <b>Q'ty</b> |
|------------------|--------------------------|--------------------------------|------------------|-------------|
| B115.....        | HBS-2028DAS-B115 .....   | Cover Plate.....               |                  | 1           |
| B116.....        | HBS-2028DAS-B116 .....   | Button Head Socket Screw ..... | M5x8L .....      | 4           |
| B117.....        | HBS-2028DAS-B117 .....   | Wheel Cover Plate.....         |                  | 1           |
| B118.....        | HBS-2028DAS-B118 .....   | Button Head Socket Screw ..... | M5x8L .....      | 6           |
| B119.....        | TS-0207021E .....        | Hex. Socket Cap Screw .....    | 1/4"x1/2"L ..... | 1           |
| B120.....        | HBS-2028DAS-B120 .....   | Spring Washer.....             | 1/4" .....       | 1           |
| B121.....        | HBS-2028DAS-B121 .....   | Washer.....                    | 1/4" .....       | 1           |
| B122.....        | HBS-2028DAS-B122 .....   | Brush Pulley Sleeve.....       |                  | 2           |
| B123.....        | HBS-2028DAS-B123 .....   | Brush Pulley .....             |                  | 1           |
| B124.....        | HBS-2028DAS-B124 .....   | C Ring .....                   | S15 .....        | 2           |
| B125.....        | BB-6002ZZE .....         | Bearing.....                   | 6002 .....       | 2           |
| B126.....        | HBS-2028DAS-B126 .....   | Brush Wheel Shaft.....         |                  | 1           |
| B127.....        | HBS-2028DAS-B127 .....   | Brush Bracket.....             |                  | 1           |
| B128.....        | HBS-2028DAS-B128 .....   | Nut .....                      | M10 .....        | 2           |
| B129.....        | HBS-2028DAS-B129 .....   | Washer.....                    | M10 .....        | 4           |
| B130.....        | HBS-2028DAS-B130 .....   | Compress Spring .....          |                  | 2           |
| B131.....        | HBS-2028DAS-B131 .....   | Hex. Socket Cap Screw .....    | M10x100L .....   | 2           |
| B132.....        | HBS-2028DAS-B132 .....   | Nut .....                      | M10 .....        | 1           |
| B133.....        | HBS-2028DAS-B133 .....   | Set Screw .....                | M10x75L .....    | 1           |
| B134.....        | TS-1523011E .....        | Set Screw .....                | M6x6L .....      | 1           |
| B135.....        | HBS-2028DAS-B135 .....   | Brush Shaft.....               |                  | 1           |
| B136.....        | HBS-2028DAS-B136 .....   | Brush.....                     | 4" .....         | 1           |
| B137.....        | HBS-2028DAS-B137 .....   | Washer.....                    | M10 .....        | 1           |
| B138.....        | HBS-2028DAS-B138 .....   | Nut .....                      | M10 .....        | 1           |
| B139.....        | HBS-2028DAS-B139 .....   | Steel Hex. Cap Bolt .....      | M16x35L .....    | 1           |
| B140.....        | HBS-2028DAS-B140 .....   | Spring Washer .....            | M16 .....        | 1           |
| B141.....        | HBS-2028DAS-B141 .....   | Washer.....                    |                  | 1           |
| B142.....        | HBS-2028DAS-B142 .....   | Driver Wheel.....              |                  | 1           |
| B143.....        | TS-1482021E .....        | Hex. Cap Bolt .....            | M6x12L .....     | 3           |
| B143-1...        | HBS-2028DAS-B143-1 ..... | Spring Washer .....            | M6 .....         | 3           |
| B143-2...        | HBS-2028DAS-B143-2 ..... | Washer .....                   | M6 .....         | 3           |
| B143-3...        | TS-2246082E .....        | Button Head Socket Screw ..... | M6x8L .....      | 4           |
| B143-4...        | HBS-2028DAS-B143-4 ..... | Blade Baffle .....             |                  | 2           |
| B143-5...        | HBS-2028DAS-B143-5 ..... | Flat Head Screw .....          | M3x6L .....      | 8           |
| B143-6...        | HBS-2028DAS-B143-6 ..... | Draw Latch .....               |                  | 2           |
| B144.....        | TS-1526021E .....        | Set Screw .....                | M12x16L .....    | 2           |
| B145.....        | HBS-2028DAS-B145 .....   | Steel Hex. Cap Bolt .....      | M16x45L .....    | 4           |
| B146.....        | HBS-2028DAS-B146 .....   | Spring Washer .....            | M16 .....        | 4           |
| B147.....        | HBS-2028DAS-B147 .....   | Working Light .....            |                  | 1           |
| B148.....        | TS-1534042E .....        | Half Round Head Screw .....    | M6x12L .....     | 4           |
| B149.....        | HBS-2028DAS-B149 .....   | Saw Bow .....                  |                  | 1           |
| B150.....        | HBS-2028DAS-B150 .....   | Blade Guide Block .....        |                  | 1           |
| B150-1...        | HBS-2028DAS-B150-1 ..... | Washer .....                   | M8 .....         | 2           |
| B151.....        | HBS-2028DAS-B151 .....   | Spring Washer .....            | M8 .....         | 2           |
| B152.....        | TS-1504081E .....        | Hex. Socket Cap Screw .....    | M8x40L .....     | 2           |
| B153.....        | HBS-2028DAS-B153 .....   | Rear Coolant Tray .....        |                  | 1           |
| B154.....        | HBS-2028DAS-B154 .....   | Shaft .....                    |                  | 2           |
| B155.....        | HBS-2028DAS-B155 .....   | Blade Guide Wheel .....        |                  | 2           |
| B156.....        | BB-6005ZZE .....         | Bearing .....                  | 6005 .....       | 4           |
| B157.....        | HBS-2028DAS-B157 .....   | C Ring .....                   | R42 .....        | 2           |
| B158.....        | HBS-2028DAS-B158 .....   | Washer .....                   | M10 .....        | 2           |
| B159.....        | HBS-2028DAS-B159 .....   | Spring Washer .....            | M10 .....        | 2           |
| B160.....        | TS-1505101E .....        | Hex. Socket Cap Screw .....    | M10x60L .....    | 2           |
| B161.....        | TS-1505041E .....        | Hex. Socket Cap Screw .....    | M10x30L .....    | 4           |
| B162.....        | HBS-2028DAS-B162 .....   | Spring Washer .....            | M10 .....        | 4           |
| B163.....        | HBS-2028DAS-B163 .....   | Washer .....                   | M10 .....        | 4           |
| B164.....        | HBS-2028DAS-B164 .....   | Steel Plate Bracket .....      |                  | 2           |
| B165.....        | HBS-2028DAS-B165 .....   | Limit Switch .....             | AZD1001T .....   | 1           |
| B166.....        | TS-1501091E .....        | Hex. Socket Cap Screw .....    | M4x35L .....     | 2           |
| B166-1...        | HBS-2028DAS-B166-1 ..... | Washer .....                   | M4 .....         | 2           |
| B167.....        | TS-1503031E .....        | Hex. Cap Bolt .....            | M6x12L .....     | 3           |
| B167-1...        | HBS-2028DAS-B167-1 ..... | Spring Washer .....            | M6 .....         | 3           |

| <b>Index No.</b> | <b>Part No.</b>     | <b>Description</b>                     | <b>Size</b>     | <b>Q'ty</b> |
|------------------|---------------------|--|-----------------|-------------|
| B167-2...        | HBS-2028DAS-B167-2. | Washer.....                            | M6.....         | 3           |
| B168.....        | HBS-2028DAS-B168    | .... Front Coolant Tray.....           | .....           | 1           |
| B168-1...        | HBS-2028DAS-B168-1  | . Blade.....                           | .....           | 1           |
| B168-2...        | HBS-2028DAS-B168-2  | . Dust Cover .....                     | 32014 .....     | 1           |
| B169.....        | BB-32014E .....     | .. Bearing.....                        | 32014 .....     | 2           |
| B170.....        | HBS-2028DAS-B170    | ... Idle Wheel .....                   | .....           | 1           |
| B171.....        | HBS-2028DAS-B171    | .... Teeth Washer.....                 | AW14(M70) ..... | 1           |
| B172.....        | HBS-2028DAS-B172    | .... Bearing Nut .....                 | AN14(M70) ..... | 1           |
| B173.....        | HBS-2028DAS-B173    | .... Bearing Cover.....                | .....           | 1           |
| B174.....        | TS-1503041E .....   | Hex. Socket Cap Screw.....             | M6x16L.....     | 3           |
| B175.....        | HBS-2028DAS-B175    | .... Guide Arm Holder.....             | .....           | 1           |
| B176.....        | TS-1525031E .....   | Set Screw.....                         | M10x16L.....    | 4           |
| B177.....        | TS-1505021E .....   | Hex. Socket Cap Screw.....             | M10x20L.....    | 4           |
| B177-1...        | TS-2246082E .....   | .. Button Head Socket Screw .....      | M6x8L .....     | 2           |
| B177-2...        | HBS-2028DAS-B177-2  | . Water Jet Pipe Bracket .....         | .....           | 1           |
| B178.....        | TS-1524041E .....   | Set Screw.....                         | M8x16L.....     | 3           |
| B179-1...        | HBS-2028DAS-B179-1  | . Blade Guard .....                    | .....           | 1           |
| B180-1...        | HBS-2028DAS-B180-1  | . Button Head Socket Screw .....       | M5x6L .....     | 2           |
| B182.....        | TS-1505051E .....   | Hex. Socket Cap Screw.....             | M10x35L.....    | 2           |
| B183.....        | HBS-2028DAS-B183    | .... Spring Washer.....                | M10 .....       | 2           |
| B184.....        | HBS-2028DAS-B184    | .... Washer.....                       | M10 .....       | 2           |
| B185.....        | HBS-2028DAS-B185    | .... Handle .....                      | M12x50L.....    | 1           |
| B185-1...        | HBS-2028DAS-B185-1  | . Washer.....                          | M12 .....       | 1           |
| B186.....        | HBS-2028DAS-B186    | .... Guide Arm .....                   | .....           | 1           |
| B187.....        | HBS-2028DAS-B187    | .... Locking Block .....               | .....           | 1           |
| B187-1...        | TS-1502011E .....   | Hex. Socket Cap Screw.....             | M5x8L .....     | 4           |
| B188.....        | TS-1524041E .....   | Set Screw.....                         | M8x16L.....     | 3           |
| B189.....        | HBS-2028DAS-B189    | .... Guide Arm ( R ) .....             | .....           | 1           |
| B190.....        | HBS-2028DAS-B190    | .... Spring Washer.....                | M12 .....       | 4           |
| B191.....        | TS-1492021E .....   | Steel Hex. Cap Bolt .....              | M12x30L.....    | 4           |
| B192.....        | HBS-2028DAS-B192    | .... Washer.....                       | M10 .....       | 2           |
| B193.....        | HBS-2028DAS-B193    | .... Spring Washer.....                | M10 .....       | 2           |
| B194-1...        | HBS-2028DAS-B194-1  | . Blade Guard ( R ).....               | .....           | 1           |
| B196-1...        | HBS-2028DAS-B196-1  | . Button Head Socket Screw .....       | M5x6L .....     | 2           |
| B197.....        | TS-1505051E .....   | Hex. Socket Cap Screw .....            | M10x35L.....    | 2           |
| B198.....        | TS-1534042E .....   | Big Round Head Screw.....              | M6x12L.....     | 2           |
| B199.....        | HBS-2028DAS-B199    | .... Plastic Handle.....               | .....           | 1           |
| B201.....        | HBS-2028DAS-B201    | .... Blade Cover.....                  | .....           | 1           |
| B202.....        | TS-2246082E .....   | Button Head Socket Screw .....         | M6x8L .....     | 2           |
| B203.....        | HBS-2028DAS-B203    | .... Contact Plate .....               | .....           | 1           |
| B204.....        | HBS-2028DAS-B204    | .... Nut .....                         | M6 .....        | 1           |
| B205.....        | TS-1482031E .....   | Hex. Cap Bolt .....                    | M6x16L.....     | 1           |
| B206.....        | HBS-2028DAS-B206    | .... Fixed Block .....                 | .....           | 2           |
| B207.....        | TS-2248302E .....   | Button Head Socket Screw .....         | M8x30L.....     | 4           |
| B208.....        | HBS-2028DAS-B208    | .... Steel Pin.....                    | 8x70L .....     | 2           |
| B209.....        | HBS-2028DAS-B209    | .... Cover Lock .....                  | .....           | 2           |
| B210.....        | TS-2246162E .....   | Button Head Socket Screw .....         | M6x16L.....     | 4           |
| B211.....        | HBS-2028DAS-B211    | .... Brush Cover .....                 | .....           | 1           |
| B212.....        | TS-2246082E .....   | Button Head Socket Screw .....         | M6x8L .....     | 2           |
| B212-1...        | HBS-2028DAS-B212-1  | . Nylon Knob .....                     | SK34 .....      | 2           |
| B212-2...        | HBS-2028DAS-B212-2  | . Hex. Cap Bolt .....                  | M6x100L.....    | 2           |
| B212-3...        | HBS-2028DAS-B212-3  | . Washer .....                         | M6 .....        | 2           |
| B212-4...        | HBS-2028DAS-B212-4  | . Pipe .....                           | .....           | 2           |
| B212-5...        | HBS-2028DAS-B212-5  | . Nut .....                            | M6 .....        | 2           |
| B213.....        | HBS-2028DAS-B213    | .... Spring Pin.....                   | M5x12L.....     | 2           |
| B214.....        | HBS-2028DAS-B214    | .... Carbide Guide (Right back).....   | .....           | 1           |
| B215.....        | HBS-2028DAS-B215    | .... Carbide Guide (Right front) ..... | .....           | 1           |
| B216.....        | HBS-2028DAS-B216    | .... Solid Pin .....                   | .....           | 2           |
| B217.....        | HBS-2028DAS-B217    | .... Shaft Bush .....                  | .....           | 1           |
| B218.....        | HBS-2028DAS-B218    | .... Bearing Bracket .....             | .....           | 1           |
| B219.....        | BB-6200ZZE.....     | Ball Bearing .....                     | 6200 .....      | 2           |
| B220.....        | TS-1503051E .....   | Hex. Socket Cap Screw .....            | M6x20L.....     | 2           |

| <b>Index No.</b> | <b>Part No.</b>   | <b>Description</b>         | <b>Size</b> | <b>Q'ty</b> |
|------------------|-------------------|----------------------------|-------------|-------------|
| B221.....        | HBS-2028DAS-B221  | Rear Bearing Seat .....    |             | 1           |
| B222.....        | HBS-2028DAS-B222  | Nut .....                  | M10 .....   | 2           |
| B223.....        | HBS-2028DAS-B223  | Spring Washer.....         | M10 .....   | 2           |
| B224.....        | TS-1504081E ..... | Hex. Socket Cap Screw..... | M8x40L..... | 1           |
| B225.....        | HBS-2028DAS-B225  | Guide Pin .....            |             | 1           |
| B226.....        | HBS-2028DAS-B226  | Guide Spring .....         |             | 1           |
| B227.....        | HBS-2028DAS-B227  | Guide Screw.....           |             | 1           |
| B228.....        | HBS-2028DAS-B228  | Bearing Shaft (Long).....  |             | 2           |
| B229.....        | BB-6201ZZE.....   | Ball Bearing .....         | 6201 .....  | 4           |
| B230.....        | HBS-2028DAS-B230  | Bearing Bush (Long).....   |             | 1           |
| B231.....        | HBS-2028DAS-B231  | Bearing Bush.....          |             | 1           |

## SECTION C

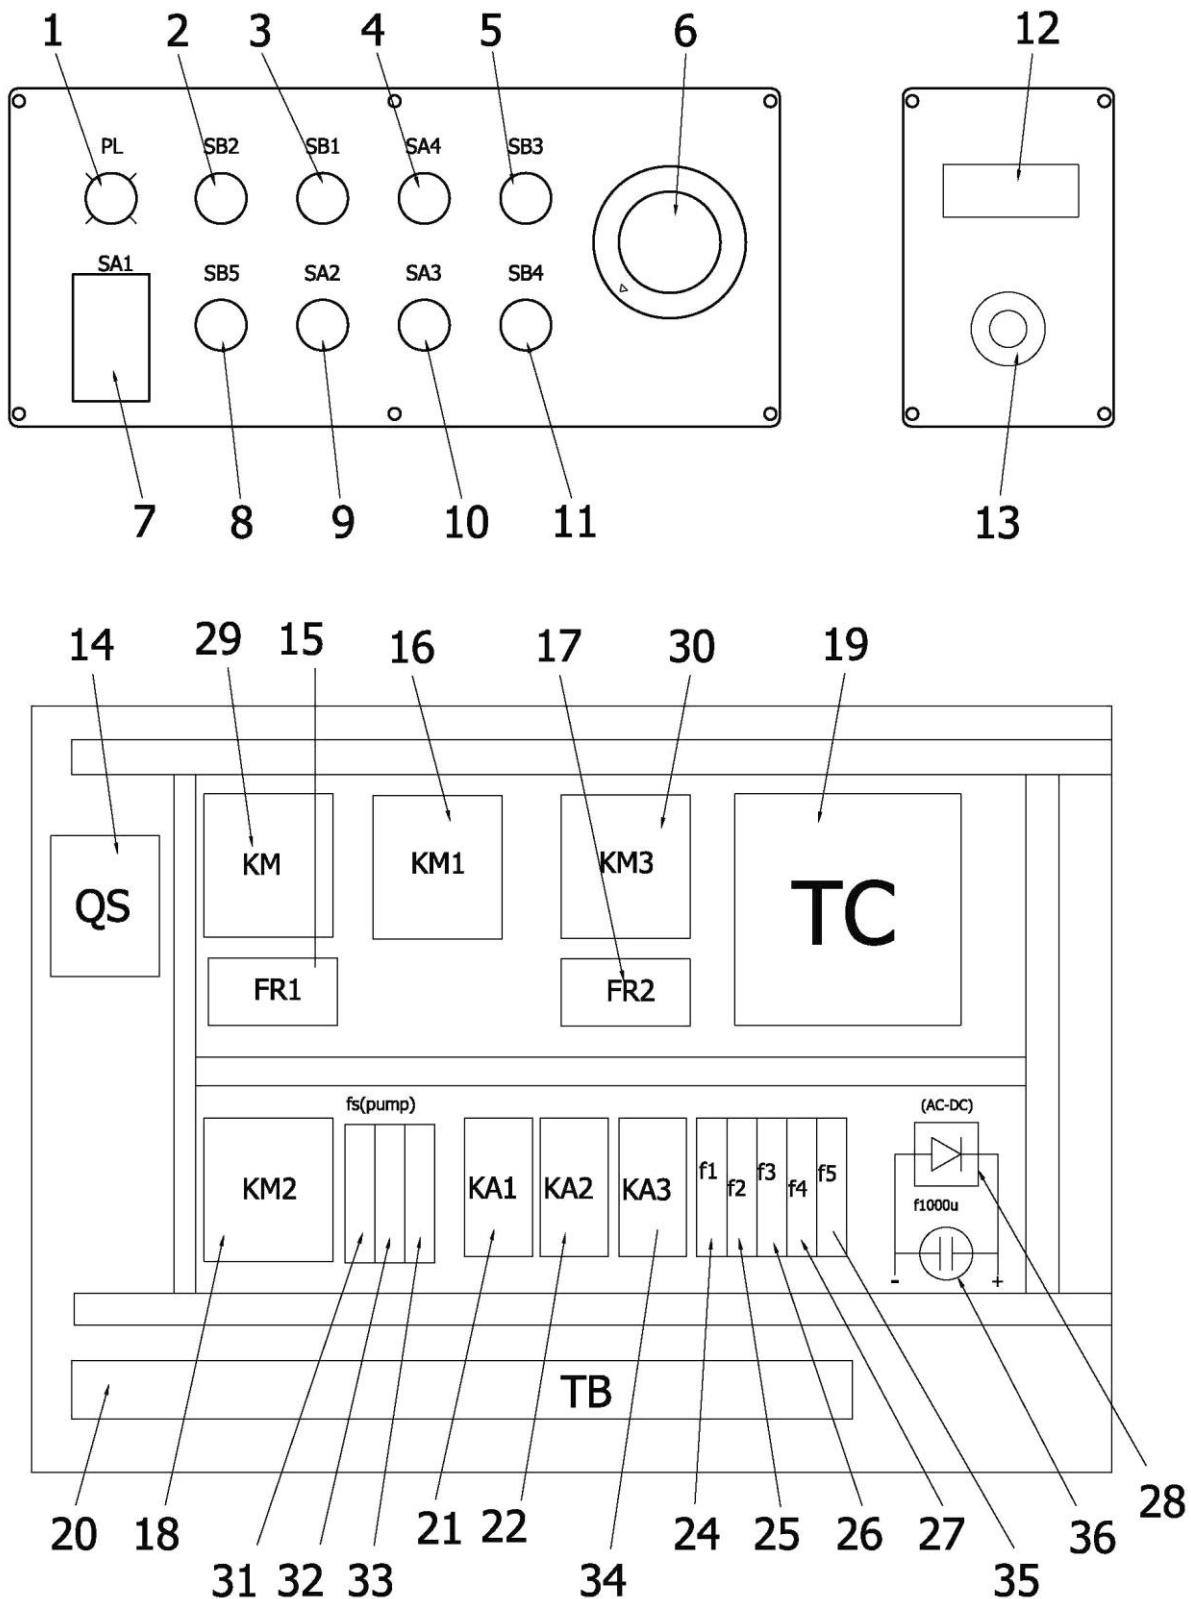


## HBS-2028DAS Control Panel & Electric Box Assembly

| <b>Index No.</b> | <b>Part No.</b>       | <b>Description</b>                       | <b>Size</b>    | <b>Q'ty</b> |
|------------------|-----------------------|--|----------------|-------------|
| C1 .....         | HBS-2028DAS-C1 .....  | Power Indicator Light .....              |                | 1           |
| C2 .....         | HBS-2028DAS-C2 .....  | Operation Start Button .....             |                | 1           |
| C3 .....         | HBS-2028DAS-C3 .....  | Operation Stop Button .....              |                | 1           |
| C4 .....         | HBS-2028DAS-C4 .....  | Blade Stop Switch.....                   |                | 1           |
| C5 .....         | HBS-2028DAS-C5 .....  | Bow Up Button.....                       |                | 1           |
| C6 .....         | HBS-2028DAS-C6 .....  | Down Feed Control Valve .....            |                | 1           |
| C7 .....         | HBS-2028DAS-C7 .....  | Emergency Stop Button .....              |                | 1           |
| C8 .....         | HBS-2028DAS-C8 .....  | Hydraulic Start Button .....             |                | 1           |
| C9 .....         | HBS-2028DAS-C9 .....  | Coolant Pump Switch.....                 |                | 1           |
| C10.....         | HBS-2028DAS-C10 ..... | Vise Open/Close Manual Switch .....      |                | 1           |
| C11.....         | HBS-2028DAS-C11 ..... | Bow Down Button .....                    |                | 1           |
| C12.....         | HBS-2028DAS-C12 ..... | Blade Speed Readout.....                 |                | 1           |
| C13.....         | HBS-2028DAS-C13 ..... | Blade Speed Adjust Knob .....            |                | 1           |
| C14.....         | HBS-2028DAS-C14 ..... | Main Power Switch .....                  |                | 1           |
| C15.....         | HBS-2028DAS-C15 ..... | Main Motor Overload Relay .....          |                | 1           |
| C16.....         | HBS-2028DAS-C16 ..... | Inverter Contactor .....                 | C12D .....     | 1           |
| C17.....         | HBS-2028DAS-C17 ..... | Hydraulic Motor Overload Relay.....      |                | 1           |
| C18.....         | HBS-2028DAS-C18 ..... | Coolant Pump Contactor.....              | C12D .....     | 1           |
| C19.....         | HBS-2028DAS-C19 ..... | Transformer.....                         | 0.262KVA ..... | 1           |
| C20.....         | HBS-2028DAS-C20 ..... | Terminal Board.....                      |                | 1           |
| C21.....         | HBS-2028DAS-C21 ..... | Bow Up Control Relay.....                |                | 1           |
| C22.....         | HBS-2028DAS-C22 ..... | Bow Down Control Relay .....             |                | 1           |
| C24.....         | HBS-2028DAS-C24 ..... | Transformer Power in Fuse.....           | 2A.....        | 1           |
| C25.....         | HBS-2028DAS-C25 ..... | Transformer Power in Fuse.....           | 2A.....        | 1           |
| C26.....         | HBS-2028DAS-C26 ..... | Power in Fuse.....                       | 3A.....        | 1           |
| C27.....         | HBS-2028DAS-C27 ..... | DC Magnetic Valve Control Fuse .....     | 10A.....       | 1           |
| C28.....         | HBS-2028DAS-C28 ..... | Bridge Rectifier System (AC to DC) ..... |                | 1           |
| C29.....         | HBS-2028DAS-C29 ..... | Blade Motor Contactor .....              | C18D .....     | 1           |
| C30.....         | HBS-2028DAS-C30 ..... | Hydraulic Motor Contactor .....          | C12D .....     | 1           |
| C31.....         | HBS-2028DAS-C31 ..... | Coolant Fuse .....                       | 1A.....        | 1           |
| C32.....         | HBS-2028DAS-C32 ..... | Coolant Fuse .....                       | 1A.....        | 1           |
| C33.....         | HBS-2028DAS-C33 ..... | Coolant Fuse .....                       | 1A.....        | 1           |
| C34.....         | HBS-2028DAS-C34 ..... | Vise Pressure Control Relay .....        |                | 1           |
| C35.....         | HBS-2028DAS-C35 ..... | Working Light Fuse.....                  | 2A.....        | 1           |
| C36.....         | HBS-2028DAS-C36 ..... | Capacitor.....                           |                | 1           |

**HBS-2028DAS Hydraulic Press Device Assembly**

**SECTION D**


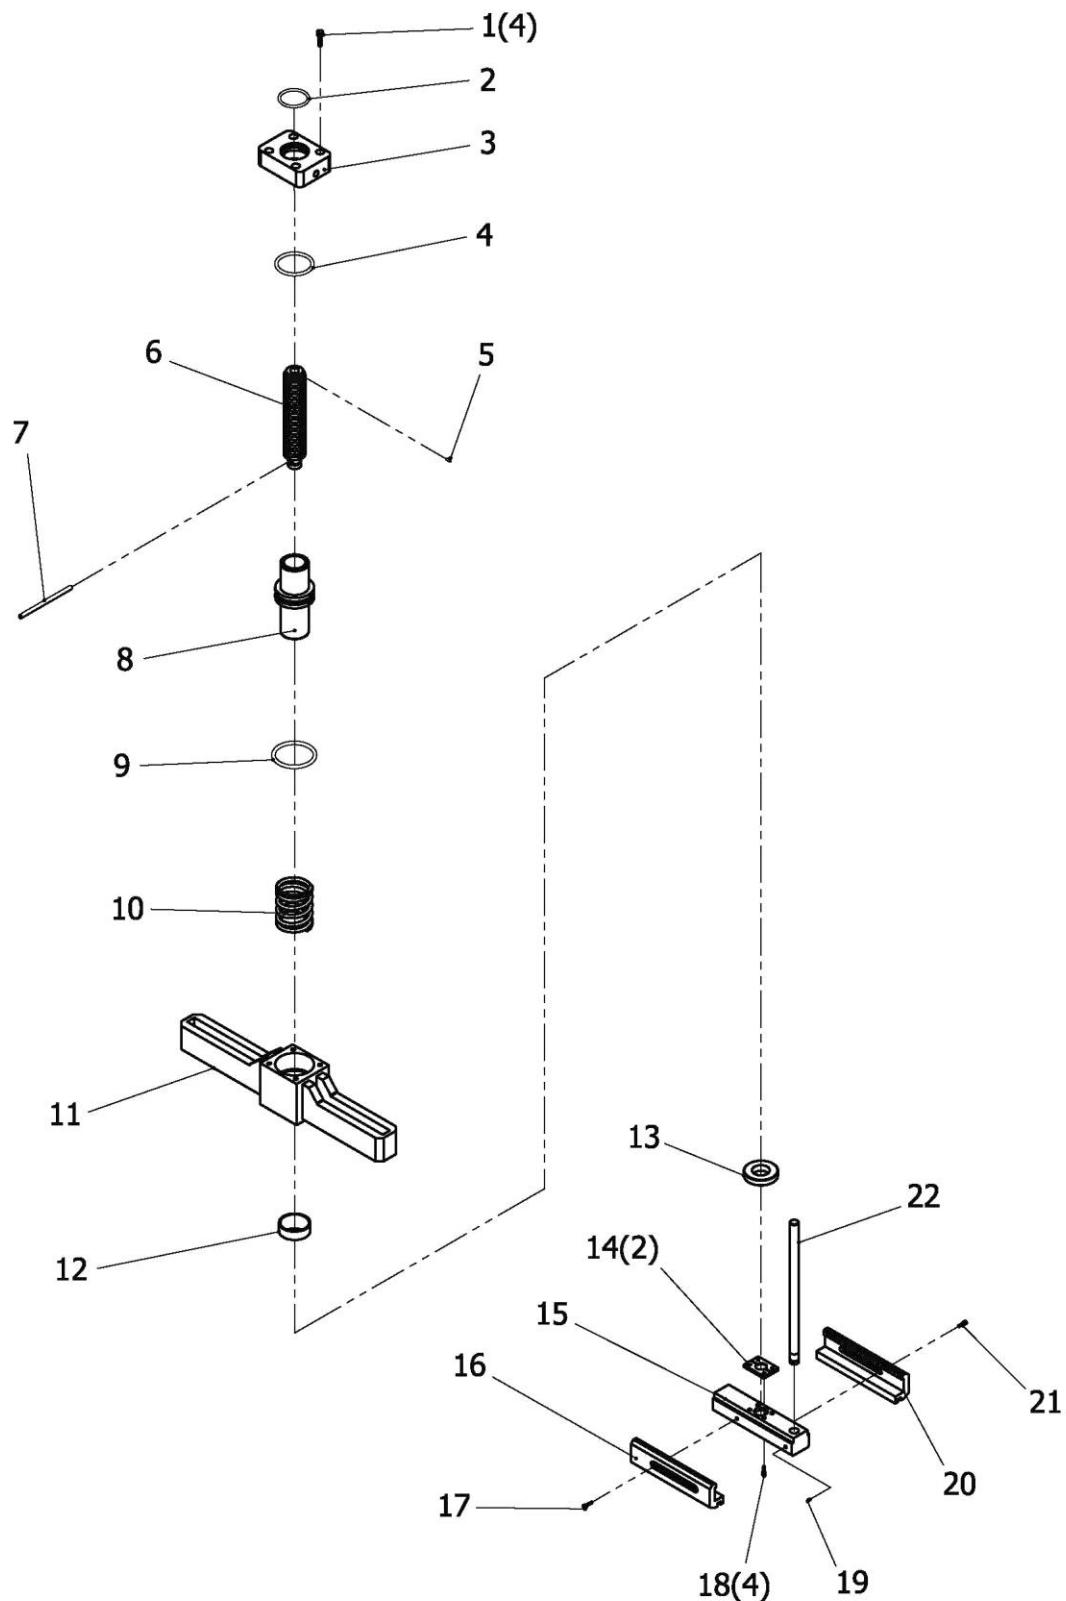


## HBS-2028DAS Hydraulic Press Device Assembly

| <b>Index No.</b> | <b>Part No.</b>  | <b>Description</b>                    | <b>Size</b>  | <b>Q'ty</b> |
|------------------|------------------|---------------------------------------|--------------|-------------|
| .....            | HBS-2028DAS-HPDA | Hydraulic Press Device Assembly ..... |              |             |
| .....            | .....            | (including 1~22) .....                |              | 1           |
| D1               | TS-1504071       | Hex. Socket Cap Screw .....           | M8x35L.....  | 4           |
| D2               | HBS-2028DAS-D2   | O Ring .....                          | P50.....     | 1           |
| D3               | HBS-2028DAS-D3   | Top Cover .....                       |              | 1           |
| D4               | HBS-2028DAS-D4   | O Ring .....                          | S70.....     | 1           |
| D5               | HBS-2028DAS-D5   | Spring Pin .....                      | 4x8L .....   | 1           |
| D6               | HBS-2028DAS-D6   | Adjusting Bolt .....                  |              | 1           |
| D7               | HBS-2028DAS-D7   | Spring Pin .....                      | 10x120L..... | 1           |
| D8               | HBS-2028DAS-D8   | Piston .....                          |              | 1           |
| D9               | HBS-2028DAS-D9   | O Ring .....                          | P58.....     | 1           |
| D10              | HBS-2028DAS-D10  | Spring .....                          |              | 1           |
| D11              | HBS-2028DAS-D11  | Press Base .....                      |              | 1           |
| D12              | HBS-2028DAS-D12  | Oilless Bush .....                    | 5020 .....   | 1           |
| D13              | HBS-2028DAS-D13  | Adjusting Nut .....                   |              | 1           |
| D14              | HBS-2028DAS-D14  | Attached Plates .....                 |              | 2           |
| D15              | HBS-2028DAS-D15  | Press Base .....                      |              | 1           |
| D16              | HBS-2028DAS-D16  | Adjusting Plate .....                 |              | 1           |
| D17              | TS-1504041E      | Hex. Socket Cap Screw .....           | M8x20L.....  | 1           |
| D18              | TS-1504041E      | Hex. Socket Cap Screw .....           | M8x20L.....  | 4           |
| D19              | TS-2276081E      | Set Screw .....                       | M6x8L .....  | 1           |
| D20              | HBS-2028DAS-D20  | Adjusting Plate .....                 |              | 1           |
| D21              | TS-1504041E      | Hex. Socket Cap Screw .....           | M8x20L.....  | 1           |
| D22              | HBS-2028DAS-D22  | Support Bar .....                     |              | 1           |

**HBS-2028DAS Hydraulic Unit & Circuit**


**SECTION E**

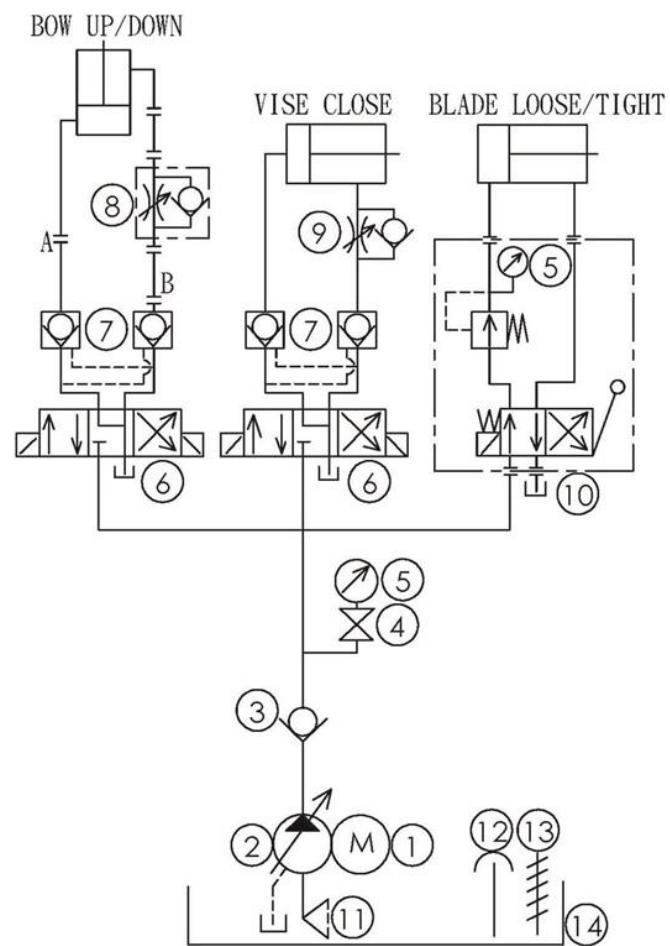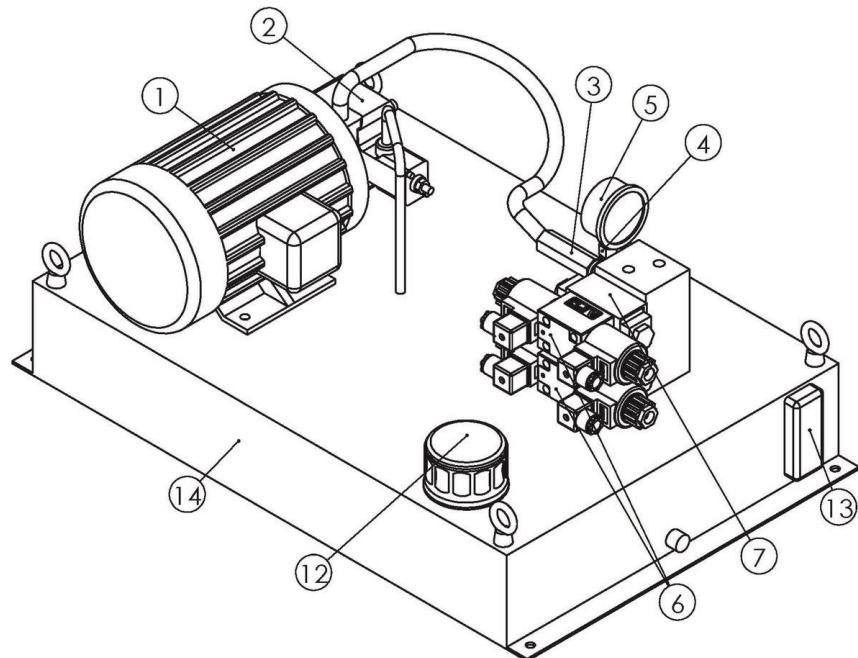

## HBS-2028DAS Hydraulic Unit & Circuit

| <b>Index No.</b> | <b>Part No.</b>       | <b>Description</b>                             | <b>Size</b>             | <b>Q'ty</b> |
|------------------|-----------------------|--|-------------------------|-------------|
| E1.....          | HBS-2028DAS-E1 .....  | Hydraulic motor .....                          | 0.75kW, 3Ph, 400V ..... | 1           |
| E2.....          | HBS-2028DAS-E2 .....  | Pump.....                                      | VA1-12A3 .....          | 1           |
| E3.....          | HBS-2028DAS-E3 .....  | Check Valves .....                             | CIT-03-A1 .....         | 1           |
| E4.....          | HBS-2028DAS-E4 .....  | Gauge Cocks.....                               | NU-02 .....             | 1           |
| E5.....          | HBS-2028DAS-E5 .....  | Pressure Gauge .....                           | AT63x100K .....         | 2           |
| E6.....          | HBS-2028DAS-E6 .....  | Solenoid Operated Directional Control Valves . | D5-02-3C4-D2 .....      | 2           |
| E7.....          | HBS-2028DAS-E7 .....  | Modular Pilot Operated Check Valves.....       | MPW-02B .....           | 2           |
| E8.....          | HBS-2028DAS-E8 .....  | Flow Control Valve.....                        | FNCG-02-4 .....         | 1           |
| E9.....          | HBS-2028DAS-E9 .....  | Flow Control Valves.....                       | TVC-03 .....            | 1           |
| E10.....         | HBS-2028DAS-E10 ..... | Hand Operated Directional Control Valves ..... | DGH-T03 .....           | 1           |
| E11.....         | HBS-2028DAS-E11 ..... | Strainers.....                                 | MF-06 .....             | 1           |
| E12.....         | HBS-2028DAS-E12 ..... | Filters With Air Breathers .....               | TOYO-50-PR .....        | 1           |
| E13.....         | HBS-2028DAS-E13 ..... | Oil Level .....                                | LS-3" .....             | 1           |
| E14.....         | HBS-2028DAS-E14 ..... | Hydraulic Tank.....                            | 700x490x120 .....       | 1           |

### HBS-2028DAS Coolant System

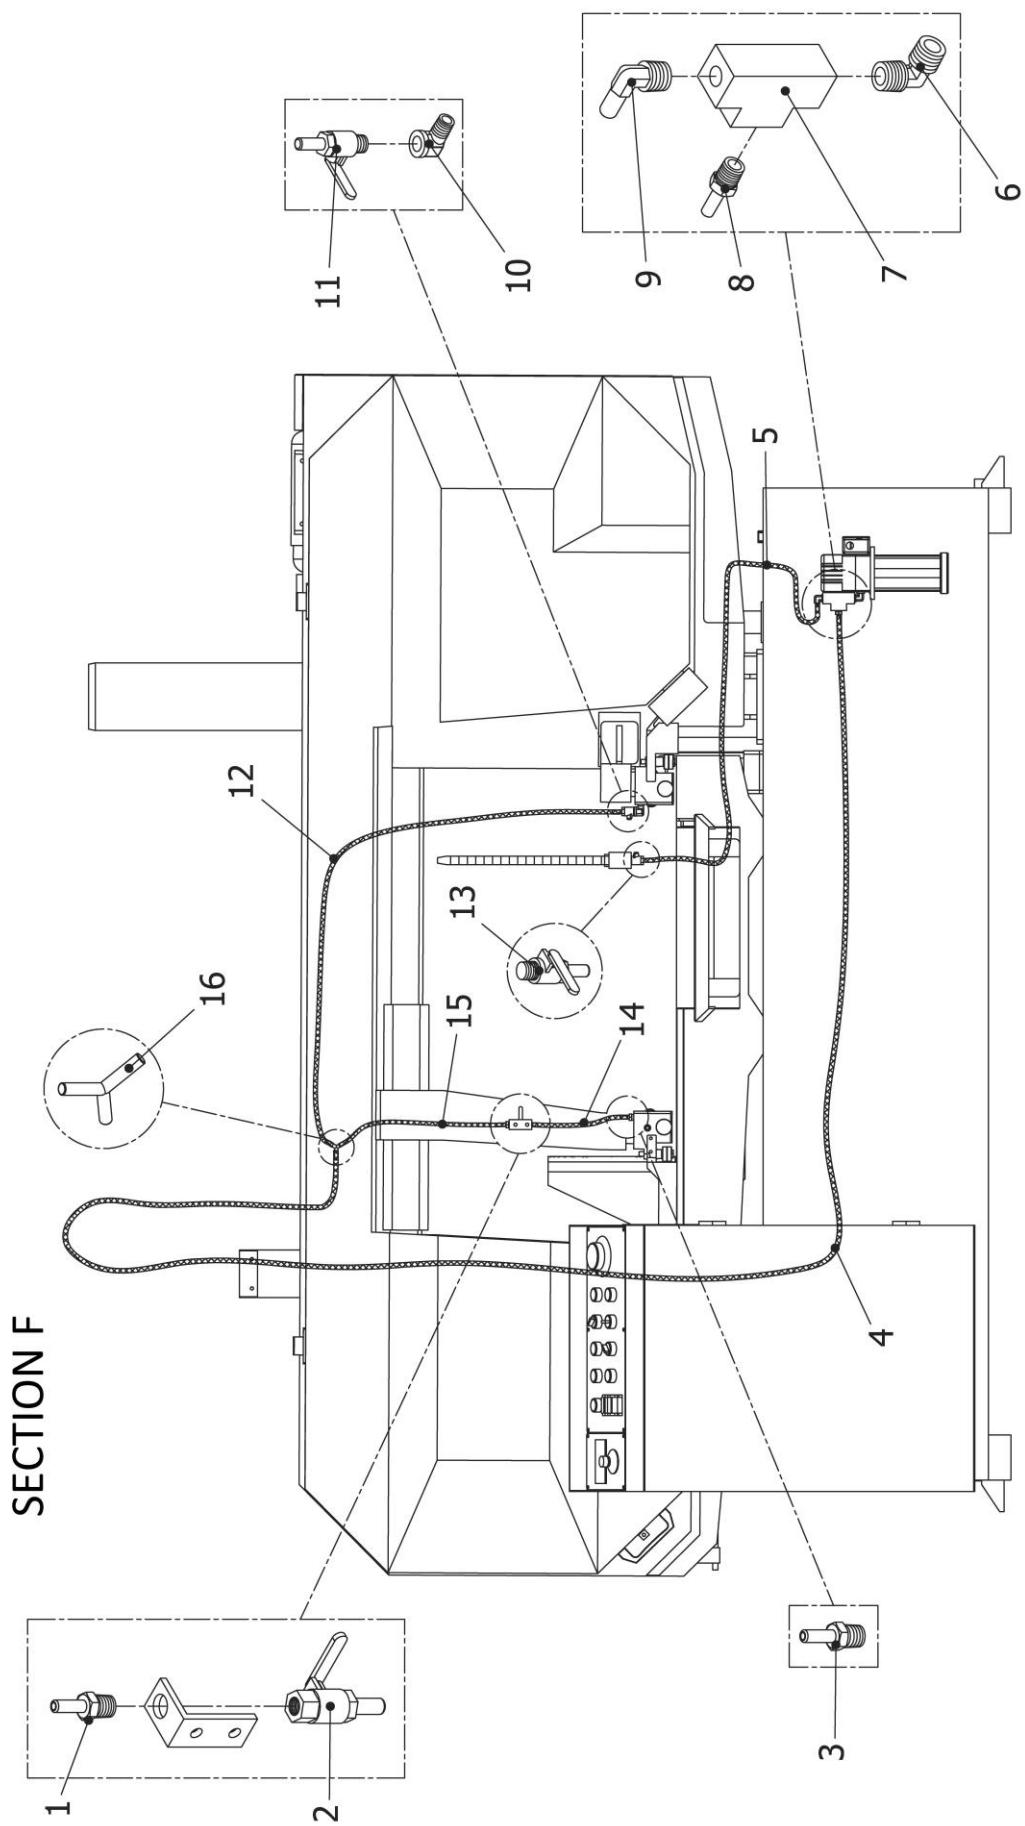

### HBS-2028DAS Coolant System

| <b>Index No.</b> | <b>Part No.</b>     | <b>Description</b>  | <b>Size</b>      | <b>Q'ty</b> |
|------------------|---------------------|---------------------|------------------|-------------|
| F1.....          | HBS-2028DAS-F1..... | Fitting .....       | 1/4x1/4 .....    | 1           |
| F2.....          | HBS-2028DAS-F2..... | Cock .....          | 1/4PTx1/4 .....  | 1           |
| F3.....          | HBS-2028DAS-F3..... | Fitting .....       | 1/4x1/4 .....    | 1           |
| F4.....          | HBS-2028DAS-F4..... | Hose .....          | 1/4"x4500mm..... | 1           |
| F5.....          | HBS-2028DAS-F5..... | Hose .....          | 1/4"x1400mm..... | 1           |
| F6.....          | HBS-2028DAS-F6..... | 90° Elbow .....     | 1/2x3/8 .....    | 1           |
| F7.....          | HBS-2028DAS-F7..... | T-Joint .....       | 3/8PT.....       | 1           |
| F8.....          | HBS-2028DAS-F8..... | Fitting .....       | 3/8x1/4 .....    | 1           |
| F9.....          | HBS-2028DAS-F9..... | 90° Elbow .....     | 3/8x1/4 .....    | 1           |
| F10.....         | HBS-2028DAS-F10.... | Reducing Elbow..... | 1/4x1/8 .....    | 1           |
| F11.....         | HBS-2028DAS-F11.... | Cock .....          | 1/4PTx1/4 .....  | 1           |
| F12.....         | HBS-2028DAS-F12.... | Hose .....          | 1/4"x2000mm..... | 1           |
| F13.....         | HBS-2028DAS-F13.... | Cock .....          | 1/4PTx1/4 .....  | 1           |
| F14.....         | HBS-2028DAS-F14.... | Hose .....          | 1/4"x300mm.....  | 1           |
| F15.....         | HBS-2028DAS-F15.... | Hose .....          | 1/4"x900mm.....  | 1           |
| F16.....         | HBS-2028DAS-F16.... | Y-Joint .....       | 1/4 .....        | 1           |

Circuit Diagram HBS-2028DAS ...50000352T .... 3~400V, 50Hz

