



JMD-18

METALWORKING Mill/Drill

JMD-18PF

350018M 1~230V, 50Hz

350051M 1~230V, 50Hz

PARTS LIST



JPW Tool Group Hong Kong Limited

98 Granville Road, Tsimshatsui East, Kowloon, Hong Kong, PRC

www.jettools.com

Импортёр в РФ: ООО «ИТА Технолоджи»

105082, Москва, Переведеновский пер., д. 17


www.jettools.ru

Made in Taiwan / Сделано на Тайване


P-350018M 350051M

2022/12

**Breakdown for the JMD-18, JMD-18PF CE Mill/Drill
Transmission Assembly**

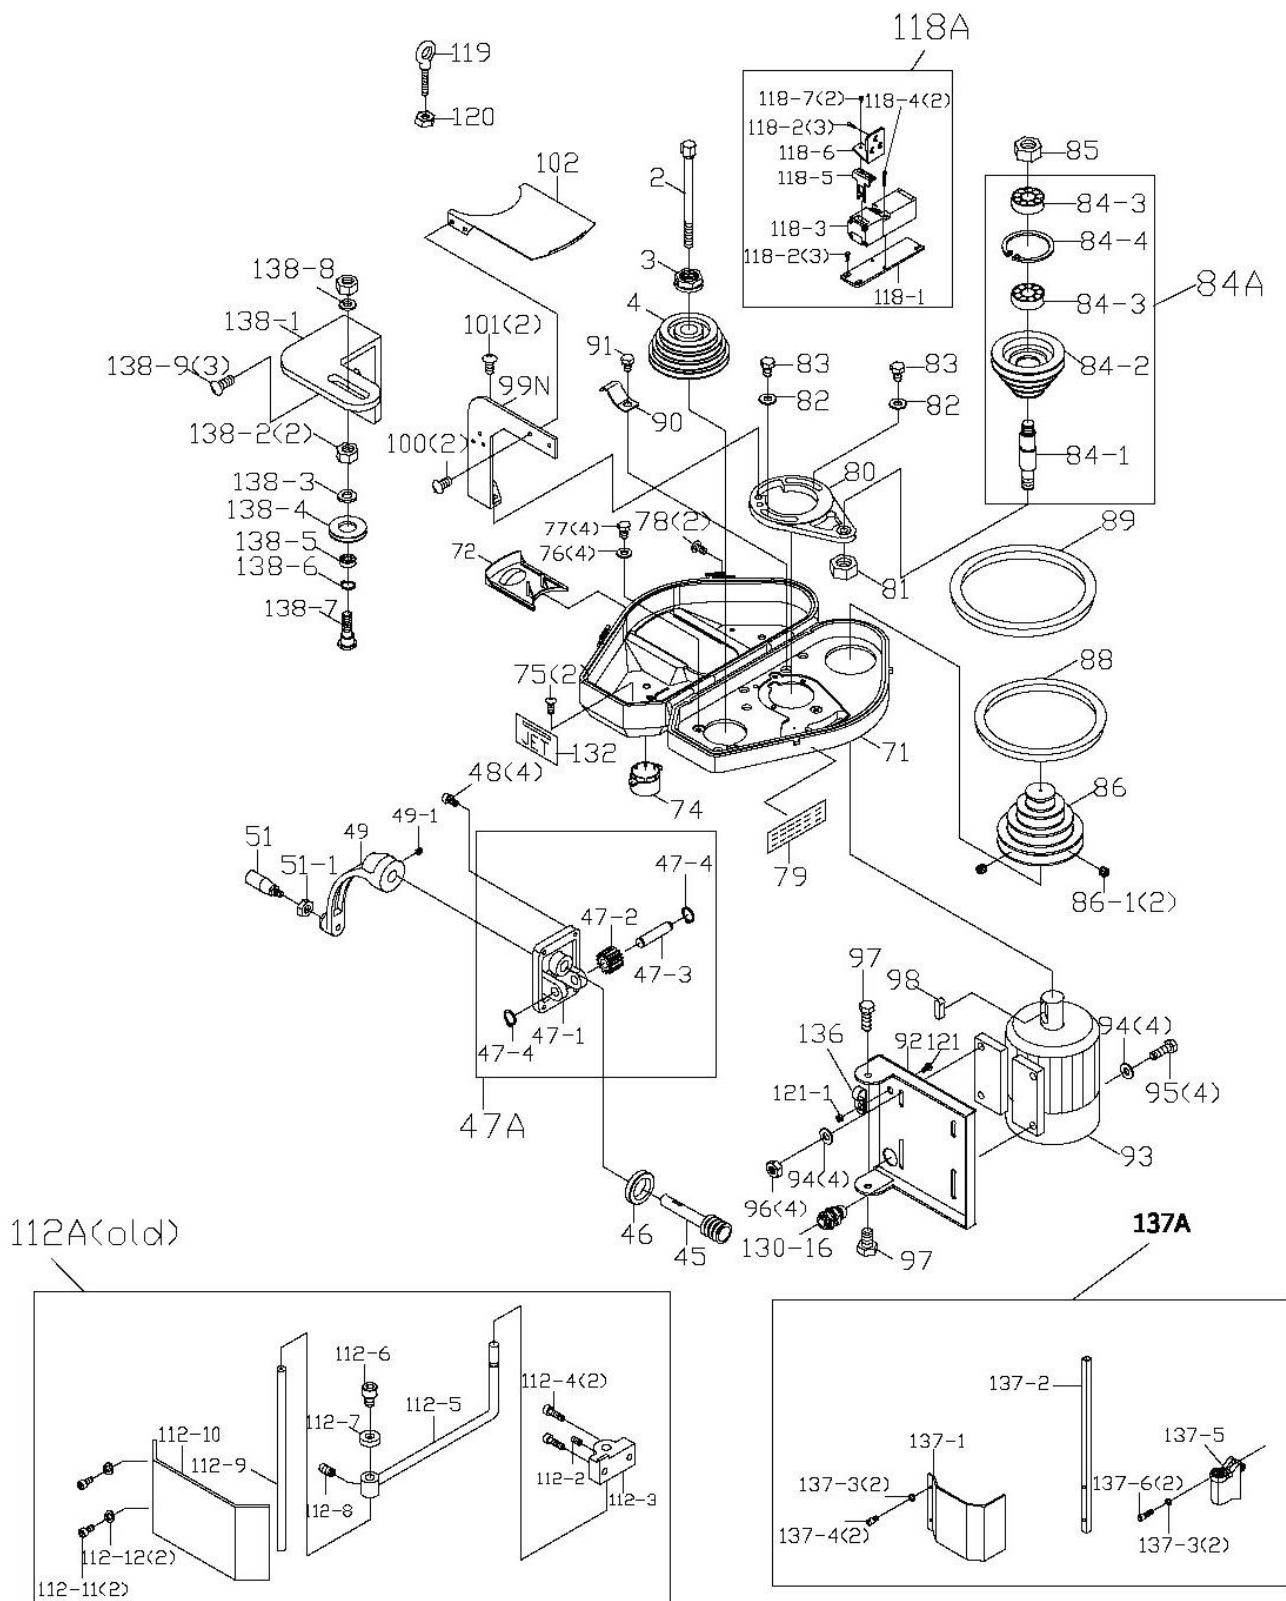


**Breakdown for the JMD-18 CE Mill/Drill
Head Assembly**

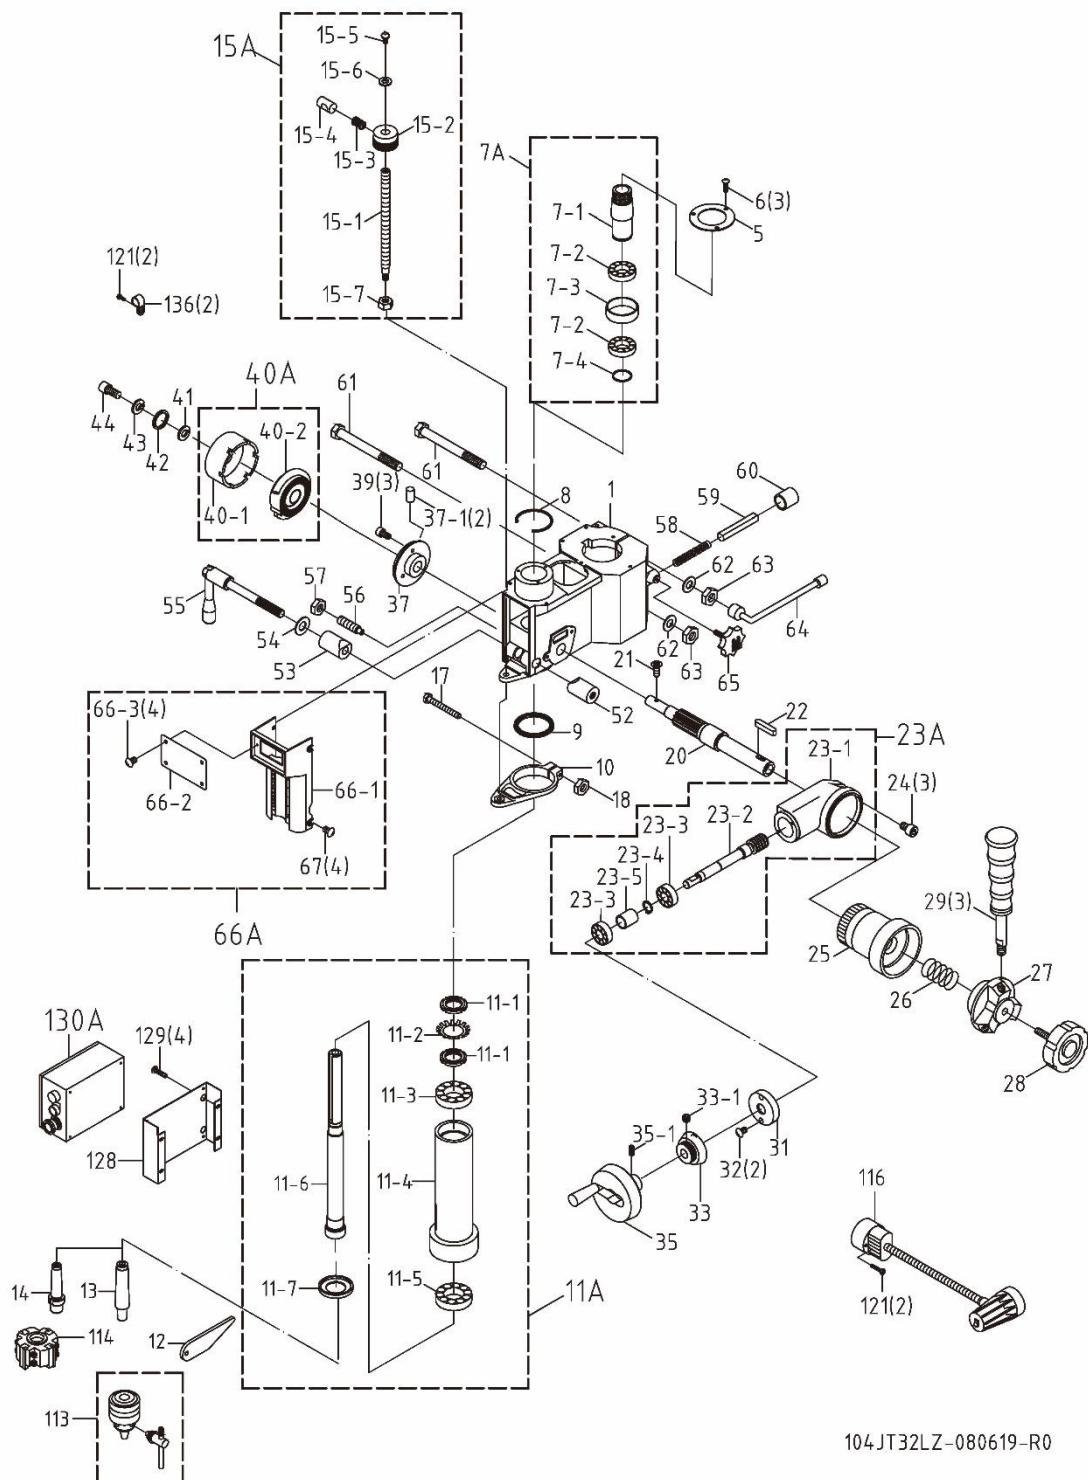

104JT32LZ-080619-R0

**Breakdown for the JMD-18PF CE Mill/Drill
Head Assembly**

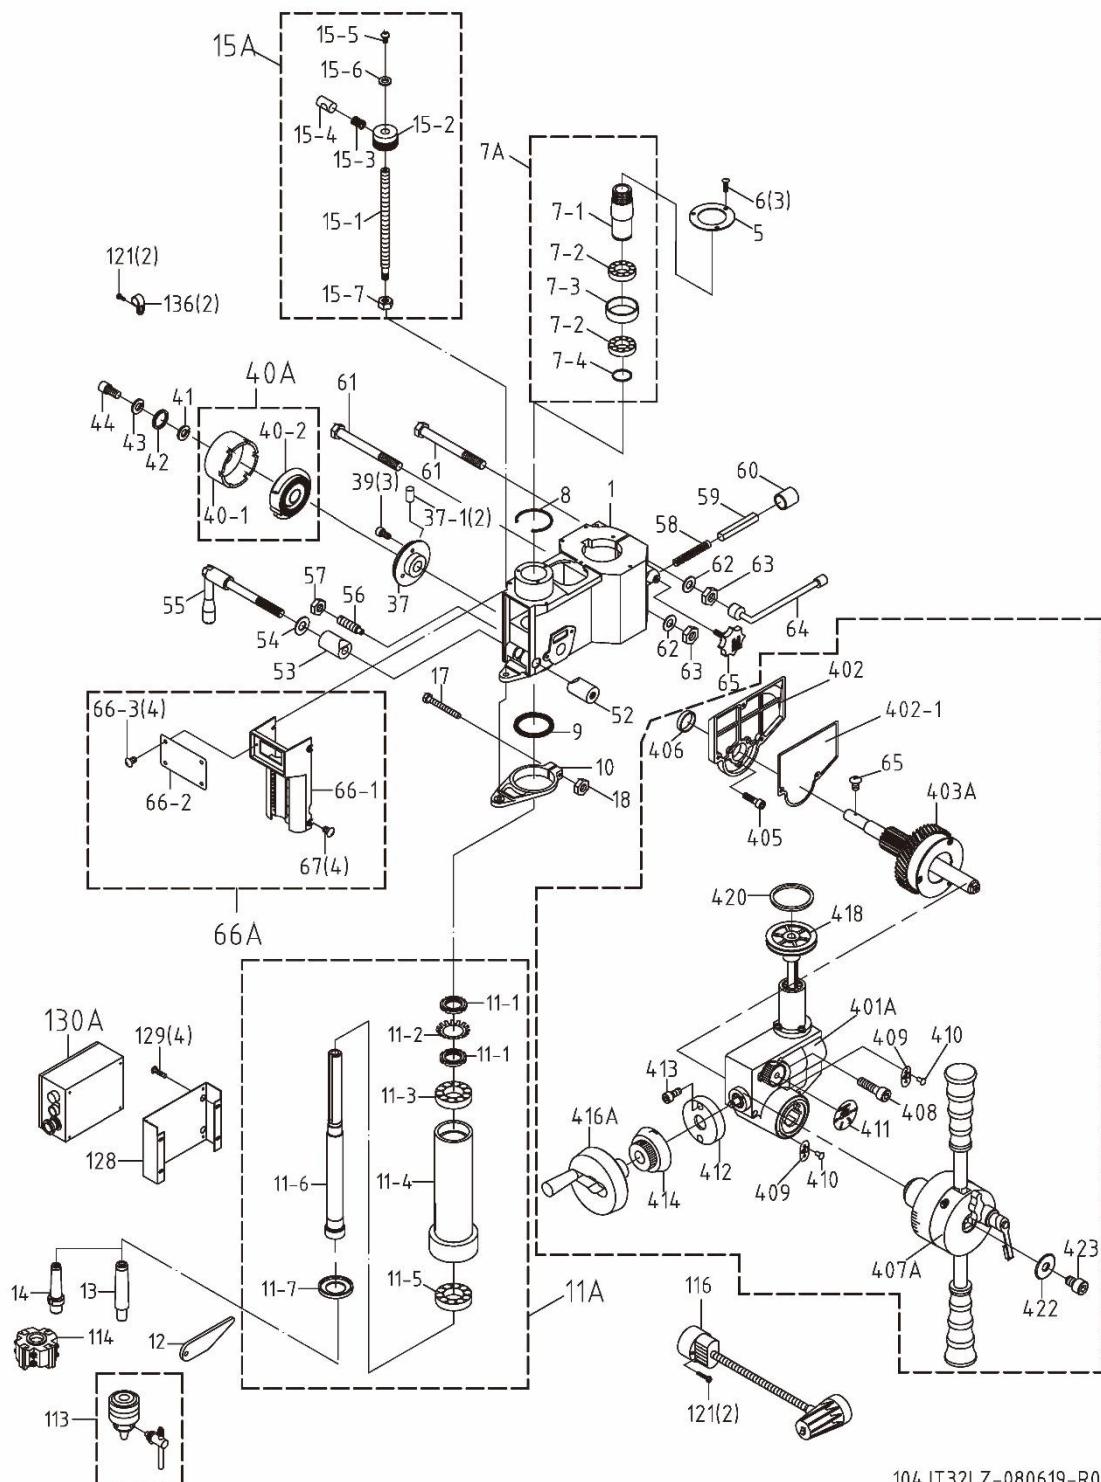

104JT32LZ-080619-R0

**Parts List for the JMD-18 ,JMD-18PF CE Mill/Drill
Transmission & Head Assembly**

| Index | Part | | | |
|--------------|--------------------|--|------------------|-------------|
| No. | No. | Description | Size | Qty. |
| 1..... | JMD18N-001..... | Head Body | | 1 |
| 2..... | JMD18VS-001E | Drawbar , MT-3 | M12..... | 1 |
| 3..... | JMD18-002A..... | Spindle Lock Nut | | 1 |
| 4..... | JMD18-003A..... | Spindle Pulley | | 1 |
| 5..... | JMD18-005 | Outer Bearing Plate | 105x66..... | 1 |
| 6..... | JMD18-133 | Round Head Screw | 1/4"x3/8" | 3 |
| 7A | JMD18-006A..... | Spindle Taper Sleeve Assembly | | 1 |
| 7-1 | JMD18-006 | Spindle Taper Sleeve | | 1 |
| | JMD18-006N..... | Spindle Taper Sleeve(s/n 20053043 and higher). | | 1 |
| 7-2 | BB-6009ZZ | Ball Bearing..... | 6009ZZ | 2 |
| 7-3 | JMD18-008 | Spacer | 74x68 | 1 |
| 7-4 | JMD18-023 | Fixed Ring..... | 2x4 | 1 |
| 8..... | JMD18-009 | C-Retaining Ring | 3x80 | 1 |
| 9..... | JMD18-012 | Rubber Flange | | 1 |
| 10..... | JMD18N-010..... | Feed Base..... | | 1 |
| 11A | JMD18-014AE | Rack Sleeve Set..... | | 1 |
| 11-1..... | JMD18-014 | Lock Nut..... | | 2 |
| 11-2..... | JMD18-137 | Lock Washer | | 1 |
| 11-3..... | BB-30206..... | Taper Roller Bearing | 30206 | 1 |
| 11-4..... | JMD18-016E..... | Rack Sleeve | MT3..... | 1 |
| 11-5..... | BB-30207..... | Taper Roller Bearing | 30207 | 1 |
| 11-6..... | JMD18-017E | Spindle Shaft..... | MT3..... | 1 |
| 11-6..... | JMD18-017E1..... | Spindle Shaft(s/n 20053043 and higher) | MT3/2-Slot | 1 |
| 11-7..... | JMD18-019 | Bearing Cap | MT3..... | 1 |
| 12..... | JMD18-012E | Punch Key | | 1 |
| 13..... | JMD18-021E | Chuck Arbor | MT3, M12 | 1 |
| 14..... | JMD18-020E | Cutter Arbor..... | 22mm, M12 | 1 |
| 15A | JMD18N-015A | Graduated Rod Assembly(only JMD-18) | | 1 |
| 15-1..... | JMD18N-15-1 | Depth Scale Stud(only JMD-18)..... | | 1 |
| 15-2..... | JMD18N-15-2 | Adjustable Stop(only JMD-18) | | 1 |
| 15-3..... | JMD18N-15-3 | Spring(only JMD-18)..... | | 1 |
| 15-4..... | JMD18N-15-4 | Push Button(only JMD-18)..... | | 1 |
| 15-5..... | JMD18N-15-5 | Hex Socket Cap Screw(only JMD-18) | M5x8 | 1 |
| 15-6 | JMD18N-15-6 | Washer(only JMD-18)..... | M5x15xt1.2 | 1 |
| 15-7..... | JMD18N-15-7 | Hex Nut(only JMD-18) | 3/8" | 1 |
| 17..... | TS-0050091 | Hex Head Screw | 1/4"x2" | 1 |
| 18..... | TS-0561011 | Hex Nut | 1/4" | 1 |
| 20..... | JMD18-106 | Pinion Shaft | | 1 |
| 21..... | JMD18-188 | Flat Cross Head Screw | 3/16"x3/8" | 1 |
| 22..... | JMD18-142 | Key | 7x7x20mm | 1 |
| 23A | JMD18N-023A | Gear Housing Assembly | | 1 |
| 23-1..... | JMD18N-023 | Gear Housing | | 1 |
| 23-2..... | JMD18-047 | Worm Shaft | | 1 |
| 23-3..... | BB-6202Z | Ball Bearing | 6202ZZ | 2 |
| 23-4..... | JMD18-148 | C-ring | 15..... | 1 |
| 23-5..... | JMD18-035 | Bearing Spacer | 34x27.5 | 1 |
| 24..... | TS-0208021 | Hex Socket Cap Screw | 5/16"x1/2" | 3 |
| 25..... | JMD18-107 | Worm Gear | | 1 |
| 26..... | JMD18-115 | Spring | | 1 |
| 27..... | JMD18-110 | Hub | | 1 |
| 28..... | JMD18-038 | Knob | | 1 |
| 29..... | JMD18N-029 | Handle Rod | | 3 |
| 31..... | JMD18-045 | Flange | | 1 |
| 32..... | JMD18-047 | Round Head Screw | 3/16"x3/8" | 2 |
| 33..... | JMD18N-033E | Micro Adjusting Indicator | | 1 |
| 33-1..... | TS-0267021 | Set Screw | 1/4"x1/4" | 1 |

| Index | Part | | Size | Qty. |
|--------------|--------------------|--|--------------|-------------|
| No. | No. | Description | | |
| 35..... | JMD18N-035A | Feed Handle Wheel Assembly..... | | 1 |
| 37..... | JMD18-105 | Spring Base..... | | 1 |
| 37-1.... | JMD18-140 | Spring Pin | | 2 |
| 39..... | JMD18-139 | Round Head Screw | 3/16"x3/4" | 3 |
| 40A | JMD18-103A..... | Spring Cover Assembly | | 1 |
| 40-1.... | JMD18-103 | Spring Cover | | 1 |
| 40-2.... | JMD18-104 | Spring | | 1 |
| 41..... | JMD18-187 | Washer | 1/4"x1" | 1 |
| 42..... | TS-0680021 | Washer | 1/4" | 1 |
| 43..... | JMD18-187 | Lock Washer | 1/4"x1" | 1 |
| 44..... | JMD18-085 | Knob | 1/4" | 1 |
| 45..... | JMD18-059 | Worm Shaft | | 1 |
| 46..... | JMD18-114 | Bushing | | 1 |
| 47A | JMD18-101A..... | Head Raise Bracket Assembly..... | | 1 |
| 47-1.... | JMD18-101 | Head Raise Bracket..... | | 1 |
| 47-2.... | JMD18-060 | Worm Gear..... | | 1 |
| 47-3.... | JMD18-061 | Shaft | 9/16" | 1 |
| 47-4.... | JMD18-154 | C-ring | S14 | 2 |
| 48..... | TS-0207061 | Hex Socket Cap Screw..... | 1/4"x1" | 4 |
| 49..... | JMD18-058E..... | Head Handle | 165L | 1 |
| 49-1.... | TS-0271061 | Set Screw..... | 3/8"x5/8" | 1 |
| 51..... | JMD18-022 | Handle | | 1 |
| 51-1.... | TS-0561031 | Hex Nut | 3/8" | 1 |
| 52..... | JMD18-026 | Fixed Collar (Thread)..... | | 1 |
| 53..... | JMD18-025 | Fixed Collar | | 1 |
| 54..... | JMD18N-054..... | Washer | 1/2"x7/8" | 1 |
| 55..... | JMD18-024E..... | Handle Rod | 165L | 1 |
| 56..... | JMD18-027 | Screw Key | 3/8" | 1 |
| 57..... | TS-0561031 | Hex Nut | 3/8" | 1 |
| 58..... | JMD18-062 | Spring | | 1 |
| 59..... | JMD18-063 | Pin | | 1 |
| 60..... | JMD18-079 | Rubber Collar | | 1 |
| 61..... | JMD18-052 | Bolt | 5/8"x6" | 2 |
| 62..... | TS-0680081 | Washer | 5/8" | 2 |
| 63..... | TS-0561071 | Hex Nut | 5/8" | 2 |
| 64..... | JMD18-050E | Lock Handle | | 1 |
| 65..... | JMD18N-065..... | Knob (w/ JET logo) | | 1 |
| 66A | JMD18N-066A | Front Cover Plate Assembly | | 1 |
| 66-1.... | JMD18N-066-1 | Front Cover Plate | | 1 |
| 66-2.... | JMD18-066-2E | Dust Plate | | 1 |
| | JMD18-WLE..... | Warning Label for CE (not shown) | | 1 |
| 66-3.... | TS-1531012 | Pan Head Screw | M3x6 | 4 |
| 67..... | JMD18N-067 | Round Head Screw | M6x12 | 4 |
| 71..... | JMD18-069 | Poly Belt Cover | | 1 |
| 72..... | JMD18-069A | Pulley Cover | | 1 |
| 74..... | JMD18-069-1 | Spindle Cover | | 1 |
| 75..... | JMD18-069-3 | Machine Screw | 4mm | 2 |
| 76..... | TS-0680032 | Flat Washer | 5/16" | 4 |
| 77..... | TS-0051011 | Hex Head Bolt | 5/16"x1/2" | 4 |
| 78..... | JMD18-078E | Pan Head Screw | M4x25 | 2 |
| 79..... | JMD18-SCE..... | Spindle Speed Chart | | 1 |
| 80..... | JMD18N-080 | Pulley Base | | 1 |
| 81..... | TS-0561071 | Hex Nut | 5/8" | 1 |
| 82..... | TS-0680031 | Washer | 5/16" | 3 |
| 83..... | TS-0051071 | Hex Head Bolt | 5/16"x1-1/2" | 2 |
| 84A | JMD18-075A | Inter Pulley Assembly | | 1 |
| 84-1.... | JMD18-075 | Inter Pulley Shaft | | 1 |
| 84-2.... | JMD18-073 | Inter Pulley | | 1 |
| 84-3.... | BB-6204Z | Ball Bearing | 6204ZZ | 2 |


| Index | Part | Description | Size | Qty. |
|--------------|---------------------|---|----------------------------------|-------------|
| No. | No. | | | |
| 84-4..... | JMD18-010 | C-ring | 2x52 | 1 |
| 85..... | TS-0561071 | Hex Nut | 5/8" | 1 |
| 86..... | JMD18-070 | Motor Pulley | | 1 |
| 86-1..... | TS-0270021 | Set Screw | 5/16"x5/16" | 2 |
| 88..... | VB-B33 | V-Belt | B33 | 1 |
| 89..... | VB-B42 | V-Belt | B42 | 1 |
| 90..... | JMD18-077 | Wire Relief Retainer | | 1 |
| 91..... | TS-0051011 | Hex Head Screw | 5/16"x1/2" | 1 |
| 92..... | JMD18-066E | Motor Mount Plate | | 1 |
| 93..... | JMD18-067E | Motor | 2HP/230V/1PH | 1 |
| | JMD18-MLE | Motor Label for CE (not shown) | | 1 |
| 94..... | TS-0680031 | Flat Washer | 5/16" | 8 |
| 95..... | TS-0051051 | Hex Head Bolt | 5/16"x1" | 4 |
| 96..... | TS-0561021 | Hex Nut | 5/16" | 4 |
| 97..... | TS-0061011 | Hex Head Bolt | 7/16"x3/4" | 2 |
| 98..... | JMD18-159 | Key | 7x7x37mm | 1 |
| 99..... | JMD18-99E | Guard Bracket | | 1 |
| 99N | JMD18-99NE | Guard Bracket | | 1 |
| 100..... | JMD18-100E | Pan Head Screw | M5x8L | 2 |
| 101..... | TS-1534042 | Pan Head Screw | M6x12 | 2 |
| 102..... | JMD18-102E | Protective Plate | | 1 |
| 112A ... | JMD18-112AE | Chuck Guard Assembly (#112-2~#112-12,S/N:9062468 higher) | 1 | |
| 112-2... | TS-1522031 | Set Screw | M5x10 | 1 |
| 112-3... | JMD18-112-3E | Rotary Supporting Base | | 1 |
| 112-4... | TS-1504051 | Socket Head Cap Screw | M8x25 | 2 |
| 112-5... | JMD18-112-5E | Rotary Shaft | | 1 |
| 112-6... | JMD18-112-6E | Socket Head Cap Screw | M4x5 | 1 |
| 112-7... | JMD18-112-7E | Bushing | | 1 |
| 112-8... | TS-1523021 | Socket Set Screw | M6x8 | 1 |
| 112-9... | JMD18-112-9E | Chuck Guard Supporting Rod | | 1 |
| 112-10... | JMD18-112-10E | Chuck Guard | | 1 |
| 112-11... | TS-1502041 | Socket Head Cap Screw | M5x16 | 2 |
| 112-12... | TS-1551031 | Lock Washer | M5 | 2 |
| 113..... | JMD18-113E | Drill Chuck w/ Chuck Key | 13mm, B16 | 1 |
| 114..... | JMD18-086E | Milling Cutter | 22mm | 1 |
| 115..... | JMD18-115E | Power Cord | H07RN-Fx1.5mm ² | 1 |
| 116..... | JMD18N-116E | Lamp Assembly for CE | 24V, 20W | 1 |
| 118A ... | JMD18-118AE | Micro Switch Bracket Set (#118-1~#118-7) | | 1 |
| 118-1... | JMD18-118-1E | Micro Switch Bracket | | 1 |
| 118-2... | JMD18-118-2E | Machine Screw | M4x12L | 6 |
| 118-3... | JMD18-118-3E | Limit Switch | | 1 |
| 118-4... | JMD18-118-4E | Socket Head Cap Screw | #8UNFx1" L | 2 |
| 118-5... | JMD18-118-5E | Limit Switch Plate | | 1 |
| 118-6... | JMD18-118-6E | Micro Switch Bracket | | 1 |
| 118-7... | JMD18-118-7E | Pan Head Screw | #8UNFx1/4" | 2 |
| 119..... | JMD18N-119E | Lifting Hook | M10x33.5L | 1 |
| 120..... | TS-1540071 | Hex Nut | M10 | 1 |
| 121..... | JMD18-121E | Pan Head Screw | M5x8 | 2 |
| 121-1... | TS-1540031 | Hex Nut | M5 | 1 |
| 128..... | JMD18-128E | Switch Plate(Date:0409 and lower) | | 1 |
| 128..... | JMD18-128EN | Switch Plate(s/no.9062468and higher) | | 1 |
| 129..... | TS-122032 | Pan Head Machine Screw | M5x8 | 4 |
| 130..... | JMD18-130E | Electrical Box Assembly | | 1 |
| 132..... | JMD15-JL | JET logo | | 1 |
| 136..... | JMD18-136E | Rubber Collar | | 3 |
| | JMD18-IDE | I.D. Label for CE (not shown) | | 1 |
| | JMD18-SCE | Speed Chart for CE (not shown) | | 1 |
| | JMD18-AP | Accessory Package (not shown) * | | 1 |

| Index | Part | | | |
|--------------|-------------------|--|----------------------|-------------|
| No. | No. | Description | Size | Qty. |
| | JMD18-36701..... | Capacitor (not shown) | 300MFD, 250VAC | 1 |
| | BD1325R-X02..... | Centrifugal Switch (not shown) | | 1 |
| | JMD18-MF | Motor Fan (not shown)..... | | 1 |
| | JMD18-MFC..... | Motor Fan Cover (not shown) | | 1 |
| | JMD18-303 | Thermal Relay (not shown) | 15A, 220V | 1 |
| 137A ... | JMD18-137A..... | Chuck Guard Assembly (S/N:9062468 higher)..... | | 1 |
| 137-1... | JMD18-137-1 | Chuck Guard | | 1 |
| 137-2... | JMD18-137-2..... | Chuck Guard Supporting Rod..... | | 1 |
| 137-3... | JMD18-137-3..... | Spring Washer | M5..... | 4 |
| 137-4... | JMD18-137-4..... | Hex. Socket Head Screw..... | M5x10L..... | 2 |
| 137-5... | JMD18-137-5..... | Rotary Supporting Base..... | | 1 |
| 137-6... | JMD18-137-6..... | Hex. Socket Head Screw..... | M5x15L..... | 2 |
| 138..... | JMD18-138 | idle pulley Assembly (S/N:9062468 higher)..... | | 1 |
| 138-1... | JMD18-138-1 | Bracket(..... | | 1 |
| 138-2 .. | JMD18-138-2..... | Hex. Nut..... | M8 | 2 |
| 138-3... | JMD18-138-3..... | Washer | 8x 16x3.5t..... | 1 |
| 138-4... | JMD18-138-4..... | Spindle Pulley | | 1 |
| 138-5... | JMD18-138-5..... | 6001ZZ | | 1 |
| 138-6... | JMD18-138-6..... | C-Retainer Ring..... | R28 | 1 |
| 138-7... | JMD18-138-7 | Shaft | | 1 |
| 138-8 ... | JMD18-138-8 | Spring Washer | M8..... | 1 |
| 138-9... | JMD18-138-9..... | Cross Round Head Screw | M5-0.8P*16L..... | 3 |

● Contents of the Accessory Package:

| Index | Part | | | |
|--------------|-------------------|--|-----------------|-------------|
| No. | No. | Description | Size | Qty. |
| | JMD18-020E | Cutter Arbor..... | 22mm..... | 1 |
| | JMD18-022..... | Handle | | 4 |
| | JMD18-039..... | Handle Rod | | 3 |
| | JMD18-040..... | Knob | | 2 |
| | JMD18-050..... | Lock Handle | | 1 |
| | 561704E..... | Drill Chuck w/ Chuck Key | MT-3/B-16 | 1 |
| | JMD18-086E | Cutter | 22mm..... | 1 |
| | JMD18-021E | Chuck Arbor (Installed) | MT-3/B-16 | 1 |
| | JMD18-012E | Punch Key..... | | 1 |
| | 365534 | Angle Vise..... | | 1 |
| | JMD18-058E | Head Handle | | 1 |
| | JMD18-201..... | Wheel..... | | 3 |
| | TS-152704 | Hex Wrench | 3mm..... | 1 |
| | TS-152705 | Hex Wrench | 4mm..... | 1 |
| | TS-152706 | Hex Wrench | 5mm..... | 1 |
| | TS-1505031 | Socket Head Cap Screw..... | M10x25 | 1 |
| | TS-1550071 | Flat Washer..... | M10..... | 1 |
| | 365534-01E..... | Hardware Package(Bolt, Nut, and Washer)..... | M12..... | 2 |
| | JMD18N-119E | Lifting Hook..... | M10x33.5..... | 1 |
| | MP-007 | Touch Up Paint..... | | 1 |

**Breakdown for the JMD-18PF CE Mill/Drill
Power-Down Feed Assembly**

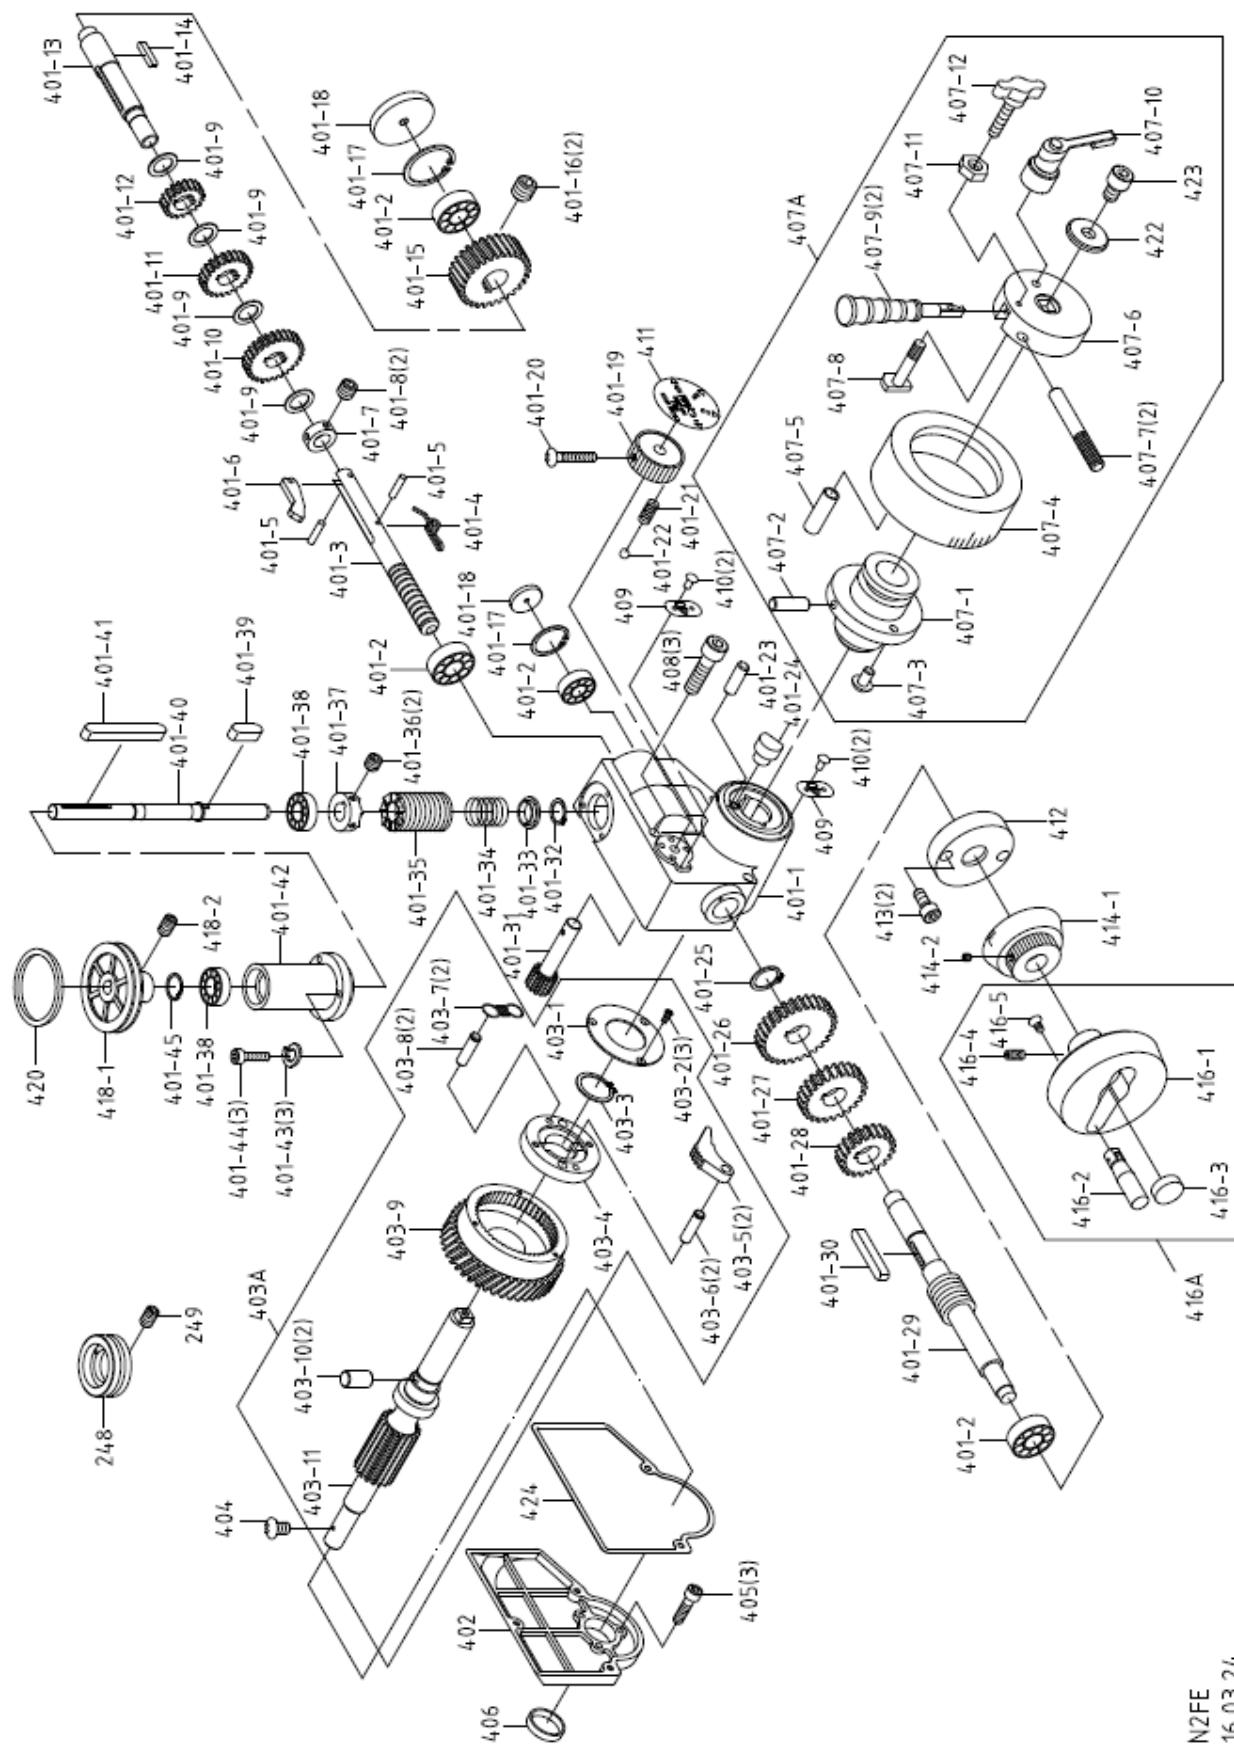


32N2FE
2016.03.24

**Parts List for the JMD-18PF CE Mill/Drill
Power-Down Feed Assembly**

| Index | Part | | Size | Qty. |
|--------------|---------------------|--|-----------------|-------------|
| No. | No. | Description | | |
| 401A | 291022AS..... | Gear Box Assembly (#401-1~#402-1)..... | | 1 |
| 401-1..... | 291022A..... | Gear Box | | 1 |
| 401-2..... | BB-6003ZZ..... | Bearing | 6003ZZ | 4 |
| 401-3..... | 2450082A..... | Change Gear Lever..... | | 1 |
| 401-4..... | 2450084B..... | Tension Spring | | 1 |
| 401-5..... | JMD18PFN-360..... | Pin | | 2 |
| 401-6..... | 2450083A..... | Stop | | 1 |
| 401-7..... | 2450089A..... | Collar | | 1 |
| 401-8..... | TS-1523011..... | Set Screw..... | M6x6 | 2 |
| 401-9..... | 2450074A..... | Spacer | | 4 |
| 401-10.... | 2450072A..... | Gear..... | | 1 |
| 401-11.... | 2450071A..... | Gear..... | | 1 |
| 401-12.... | 2450070A..... | Gear..... | | 1 |
| 401-13.... | 291026A..... | Shaft | | 1 |
| 401-14.... | JMD18PFN-269..... | Key | 5x5x25 | 1 |
| 401-15.... | 291047 | Worm Gear..... | | 1 |
| 401-16.... | TS-1523011..... | Set Screw..... | M6x6 | 2 |
| 401-17.... | JMD18PFN-282..... | C-Ring | R35 | 2 |
| 401-18.... | 2450014 | Cover | | 2 |
| 401-19.... | 2450079 | Speed Knob | | 1 |
| 401-20.... | JMD18PFN-303..... | Round Head Screw | M4x25 | 1 |
| 401-21.... | 290089 | Spring | | 1 |
| 401-22.... | SB-5/16 | Steel Ball | 5/16" | 1 |
| 401-23.... | 2450051 | Pin | | 1 |
| 401-24.... | 2450020 | Release Block | | 1 |
| 401-25.... | JMD18PFN-373..... | C-Ring..... | S19 | 1 |
| 401-26.... | 2450077A | Gear | | 1 |
| 401-27.... | 2450076A | Gear | | 1 |
| 401-28.... | 2450075A | Gear | | 1 |
| 401-29.... | 291028A | Transmission Worm | | 1 |
| 401-30.... | JMD18PFN-358..... | Key | 5x5x32 | 1 |
| 401-31.... | 291027A | Pinion | | 1 |
| 401-32.... | JMD18PFN-369..... | C-ring | S15 | 1 |
| 401-33.... | 2450057 | Bushing | | 1 |
| 401-34.... | 2450054 | Spring | | 1 |
| 401-35.... | 291046 | Worm Shaft | | 1 |
| 401-36.... | TS-1523011..... | Set Screw | M6x6 | 2 |
| 401-37.... | 291050 | Clutch Block | | 1 |
| 401-38.... | BB-6003ZZ..... | Ball Bearing | | 2 |
| 401-39.... | JMD18PFN-262..... | Key | 5x5x10 | 1 |
| 401-40.... | 291023A | Transmission Shaft | | 1 |
| 401-41.... | JMD18PFN-389..... | Key | 5x5x45 | 1 |
| 401-42.... | 291024A | Bearing Housing | | 1 |
| 401-43.... | TS-0720071..... | Lock Washer | 1/4" | 3 |
| 401-44.... | TS-0207041..... | Hex Socket Cap Screw | 1/4"x3/4" | 3 |
| 401-45.... | JMD18PFN-255..... | C-Ring | S17 | 1 |
| 402..... | 291032A | Base | | 1 |
| 402-1..... | JMD18PFN-402-1..... | Greaseproof paper | | 1 |
| 403A | 291029AS..... | Worm Gear Assembly (#403-1~#403-11)..... | | 1 |
| 403-1..... | 2450048 | Worm Gear Cover | | 1 |
| 403-2..... | JMD18PFN-346..... | Flat Cross Head Screw | M4x4 | 3 |
| 403-3..... | JMD18PFN-320..... | C-Ring | S25 | 1 |
| 403-4..... | 2450024 | Clutch Gear Case | | 1 |
| 403-5..... | 2450026 | Clutch Key | | 2 |
| 403-6..... | 2450025 | Clutch Key Pin | | 2 |

| Index | Part | | Size | Qty. |
|--------------|---------------------|--|--------------|-------------|
| No. | No. | Description | | |
| 403-7 | 2450028..... | Spring..... | | 2 |
| 403-8 | 2450027..... | Spring Pin..... | | 2 |
| 403-9 | 2450023..... | Worm Gear..... | | 1 |
| 403-10 | 2450022..... | Key..... | | 2 |
| 403-11 | 291029A..... | Pinion Shaft..... | | 1 |
| 404 | JMD18PFN-250 | Flat Head Screw | 3/16"x3/8" | 1 |
| 405 | TS-0208061 | Hex Socket Cap Screw | 5/16"x1-1/4" | 3 |
| 406 | 291049..... | Bearing Spacer..... | | 1 |
| 407A..... | 291030AS..... | Clutch Bushing Assembly (#407-1~#407-12)..... | | 1 |
| 407-1 | 291030A..... | Clutch Bushing | | 1 |
| 407-2 | 2450030..... | Bushing Pin | | 1 |
| 407-3 | 2450031..... | Bushing Stop | | 1 |
| 407-4 | 2540032E | Scale Base | | 1 |
| 407-5 | JMD18PFN-326 | Pin..... | | 1 |
| 407-6 | 2450037..... | Hub | | 1 |
| 407-7 | 2450039..... | Pin..... | | 2 |
| 407-8 | 2450033..... | Scale Base Set Screw | | 1 |
| 407-9 | 2450038..... | Handle | | 2 |
| 407-10 | 2450063..... | Graduated Base Handle..... | | 1 |
| 407-11 | H02050 | Hex Nut | 5/16" | 1 |
| 407-12 | JMD18PFN-407-12 ... | Set Screw..... | 5/16"x3/4" | 1 |
| 408 | JMD18PFN-350 | Hex Socket Cap Screw | 5/16"x3-1/2" | 3 |
| 409 | 2450060..... | Pointer..... | | 2 |
| 410 | JMD18PFN-309 | Rivet..... | | 4 |
| 411 | JMD18PFN-354E | Speed Scale | | 1 |
| 412 | 6145 | Worm Cover | | 1 |
| 413 | JMD18PFN-376 | Socket Head Cap Screw | 3/16"x3/8" | 2 |
| 414-1 | 291051E | Micro Adjusting Indicator..... | | 1 |
| 414-2 | TS-0267031 | Set Screw | 1/4"x5/16" | 1 |
| 416A..... | 6142-2S | Fine Down Wheel Assembly (#416-1~#416-4) | | 1 |
| 416-1 | 6142-2 | Hand Wheel | | 1 |
| 416-2 | 6580 | Handle | | 1 |
| 416-3 | 6581 | Handle Screw | | 1 |
| 416-4 | TS-0270021 | Set Screw | 5/16"x5/16" | 1 |
| 418 | 290110..... | Sub-Pulley | | 1 |
| 419 | TS-0267031 | Set Screw | 1/4"x5/16" | 1 |
| 420 | JMD18PF-114..... | Belt..... | | 1 |
| 422 | 2450040..... | Washer | M8..... | 1 |
| 423 | TS-1504031 | Hex Socket Cap Screw | M8x16 | 1 |
| | JMD18PF-PFAE | Power Down Feed Assembly Complete (#401~#423)..... | | 1 |

**Breakdown for the JMD-18 ,JMD-18PF CE Mill/Drill
Table, Base, and Column Assembly**

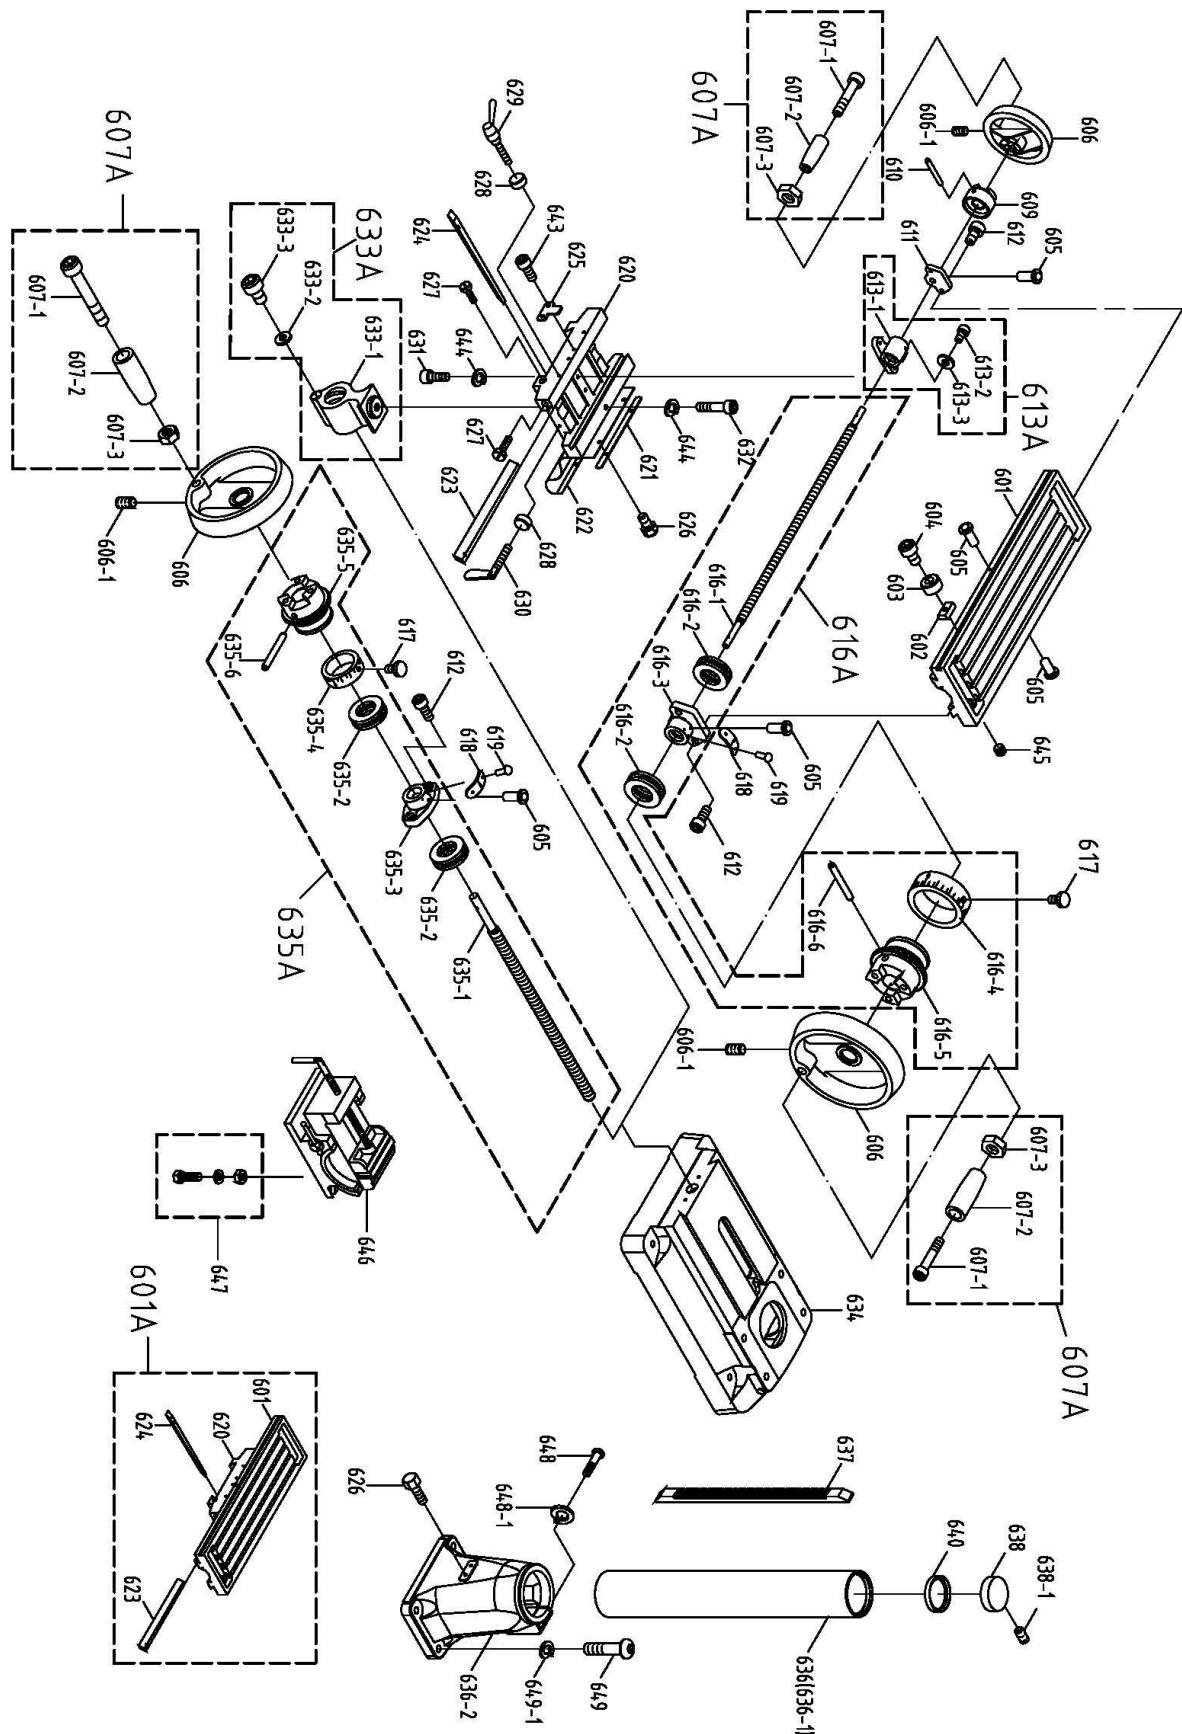


**Parts List for the JMD-18,JMD-18PF CE Mill/Drill
Table, Base, and Column Assembly**

| Index | Part | Description | Size | Qty. |
|--------------|--------------------|---|-------------------|-------------|
| No. | No. | | | |
| 601..... | JMD18-228..... | Table..... | 31L..... | 1 |
| 602..... | JMD18-229..... | Fixed Block..... | | 2 |
| 603..... | JMD18-230..... | Movable Ring | | 2 |
| 604..... | TS-0207021..... | Hex Socket Head Screw..... | 1/4"x1/2" | 2 |
| 605..... | JMD18-368..... | Oil Ball | 1/4" | 5 |
| 606..... | JMD18-201..... | Table Handle Wheel..... | | 3 |
| 606-1..... | TS-0267041..... | Set Screw..... | 1/4"x3/8" | 3 |
| 607A | JMD18-201A..... | Handle Assembly | | 3 |
| 607-1..... | JMD18-201-1..... | Hex Socket Head Screw..... | 3/8"x16UNC | 3 |
| 607-2..... | JMD18-201-2..... | Knob | | 3 |
| 607-3..... | JMD18-201-3..... | Hex Nut..... | 3/8" | 3 |
| 609..... | JMD18-220..... | Table Clutch..... | | 1 |
| 610..... | JMD18-366..... | Pin | 5x38..... | 1 |
| 611..... | JMD18-222..... | Left Flange | | 1 |
| 612..... | TS-0208062..... | Hex Socket Head Screw..... | 5/16"x1" | 6 |
| 613A | JMD18-223AE | Table Nut Assembly (#613-1~#613-3) | | 1 |
| 613-1..... | JMD18-223..... | Table Nut | TM23.7xP2.5..... | 1 |
| 613-2..... | TS-1502041..... | Cheese Head Mach Screw | M5x16..... | 1 |
| 613-3..... | TS-1550031..... | Flat Washer..... | M5..... | 1 |
| 616A | JMD18-224AE | Table Screw Assembly (#616-1~#616-6) | | 1 |
| 616-1..... | JMD18-224E..... | Table Lead Screw | TM23.7*P2.5 | 1 |
| 616-2..... | BB-51103 | Thrust Bearing..... | 51103..... | 2 |
| 616-3..... | JMD18-226..... | Right Flange | | 1 |
| 616-4..... | JMD18-202-1E | Graduated Dial | | 1 |
| 616-5..... | JMD18-202..... | Dial Clutch..... | | 1 |
| 616-6..... | JMD18-366..... | Pin | 5x38L..... | 1 |
| 617..... | JMD18N-617 | Link Screw | | 2 |
| 618..... | JMD18-121..... | Link Plate | | 2 |
| 619..... | JMD18-204-2..... | Rivet..... | 2mm..... | 4 |
| 620..... | JMD18-216..... | Center Base | 31L..... | 1 |
| 621..... | JMD18-219..... | Antidust Plate | | 1 |
| 622..... | JMD18-217..... | Antidust Plate Assembly | | 1 |
| 623..... | JMD18-227..... | Gib Strip | 31L..... | 1 |
| 624..... | JMD18-207..... | Gib Strip | 31L..... | 1 |
| 625..... | JMD18-214..... | Fixed Block..... | | 1 |
| 626..... | TS-0051011..... | Hex Head Screw | 51/6"X1/2" | 4 |
| 626 | 5217641 | Hex Head Screw(s/n 20123058 and higher) | M8X15L | 2 |
| 627..... | JMD18-212..... | Gib Strip Bolt | | 2 |
| 628..... | JMD18N-628..... | Bushing | | 4 |
| 629..... | JMD18-213-1..... | Locking Handle..... | | 2 |
| 630..... | JMD18-213..... | Leaf Screw | | 2 |
| 631..... | TS-0208061..... | Hex Socket Head Screw..... | 5/16"X1" | 2 |
| 632..... | TS-0051101..... | Hex Socket Head Screw..... | 5/16"x2-1/4" | 1 |
| 633A | JMD18-215AE | ACME Nut Assembly (#633-1~#633-3) | | 1 |
| 633-1..... | JMD18-215..... | Table Base Nut..... | TM23.7*P2.5 | 1 |
| 633-2..... | TS-1550031..... | Flat Washer..... | M5..... | 1 |
| 633-3..... | TS-1502041..... | Hex Socket Head Screw..... | M5x16 | 1 |
| 634..... | JMD18N-634 | Base | | 1 |
| 634 | JMD18N-634N | Base(s/n 20123058 and higher) | | 1 |
| 635A | JMD18-205AE | Cross Lead Screw Assembly (#635-1~#635-6) | | 1 |
| 635-1..... | JMD18-205E..... | Cross Lead Screw | TM23.5*P2.5 | 1 |
| 635-2..... | BB-51103 | Thrust Bearing..... | 51103..... | 2 |
| 635-3..... | JMD18-204..... | Square Flange..... | | 1 |
| 635-4..... | JMD18-202-1E | Graduated Dial | | 1 |

635-5..... JMD18-202..... Dial Clutch..... 1

| Index | Part | | | |
|--------------|---------------------|--|-------------------|-------------|
| No. | No. | Description | Size | Qty. |
| 635-6..... | JMD18-366 | Pin..... | 5x38mm..... | 1 |
| 636 | JMD18N-636..... | Column Base..... | | 1 |
| 636 | JMD18N-636G | Column Base | 958mm..... | 1 |
| | JMD18N-636GN | Column (s/n 20123058 and higher) | 765mm..... | 1 |
| 636-2..... | JMD18N-636-1G | Base(s/n 20123058 and higher) | | 1 |
| 637 | JMD18N-637 | Rack..... | 600.5L | 1 |
| 638 | JMD18-211 | Column Cap | | 1 |
| 638-1 | TS-0270021 | Set Screw | 5/16"x5/16" | 1 |
| 640 | JMD18-209 | Column Flange Ring | | 1 |
| 643 | TS-0208022 | Socket Head Cap Screw | 5/16"x1/2" | 2 |
| 644 | JMD18N-644..... | Lock Washer..... | 5/16" | 3 |
| 645 | JMD18N-645..... | Plug..... | PT1/4"x3/8"..... | 1 |
| 646 | 365534..... | Vise | | 1 |
| 647 | 365534-01E | Hardware Package (Bolt, Nut, and Washer) | M12 | 2 |
| 648 | JMD18-648 | Special screw | M12X50L | 2 |
| 648-1 | JMD18-648-1 | Gasket | M12 | 2 |
| 649 | JMD18-649 | Special screw | M16X60L | 4 |
| 649-1 | JMD18-649-1 | Gasket | M16 | 4 |

**Breakdown for the JMD-18, JMD-18PF CE Mill/Drill
Electrical Box Assembly**

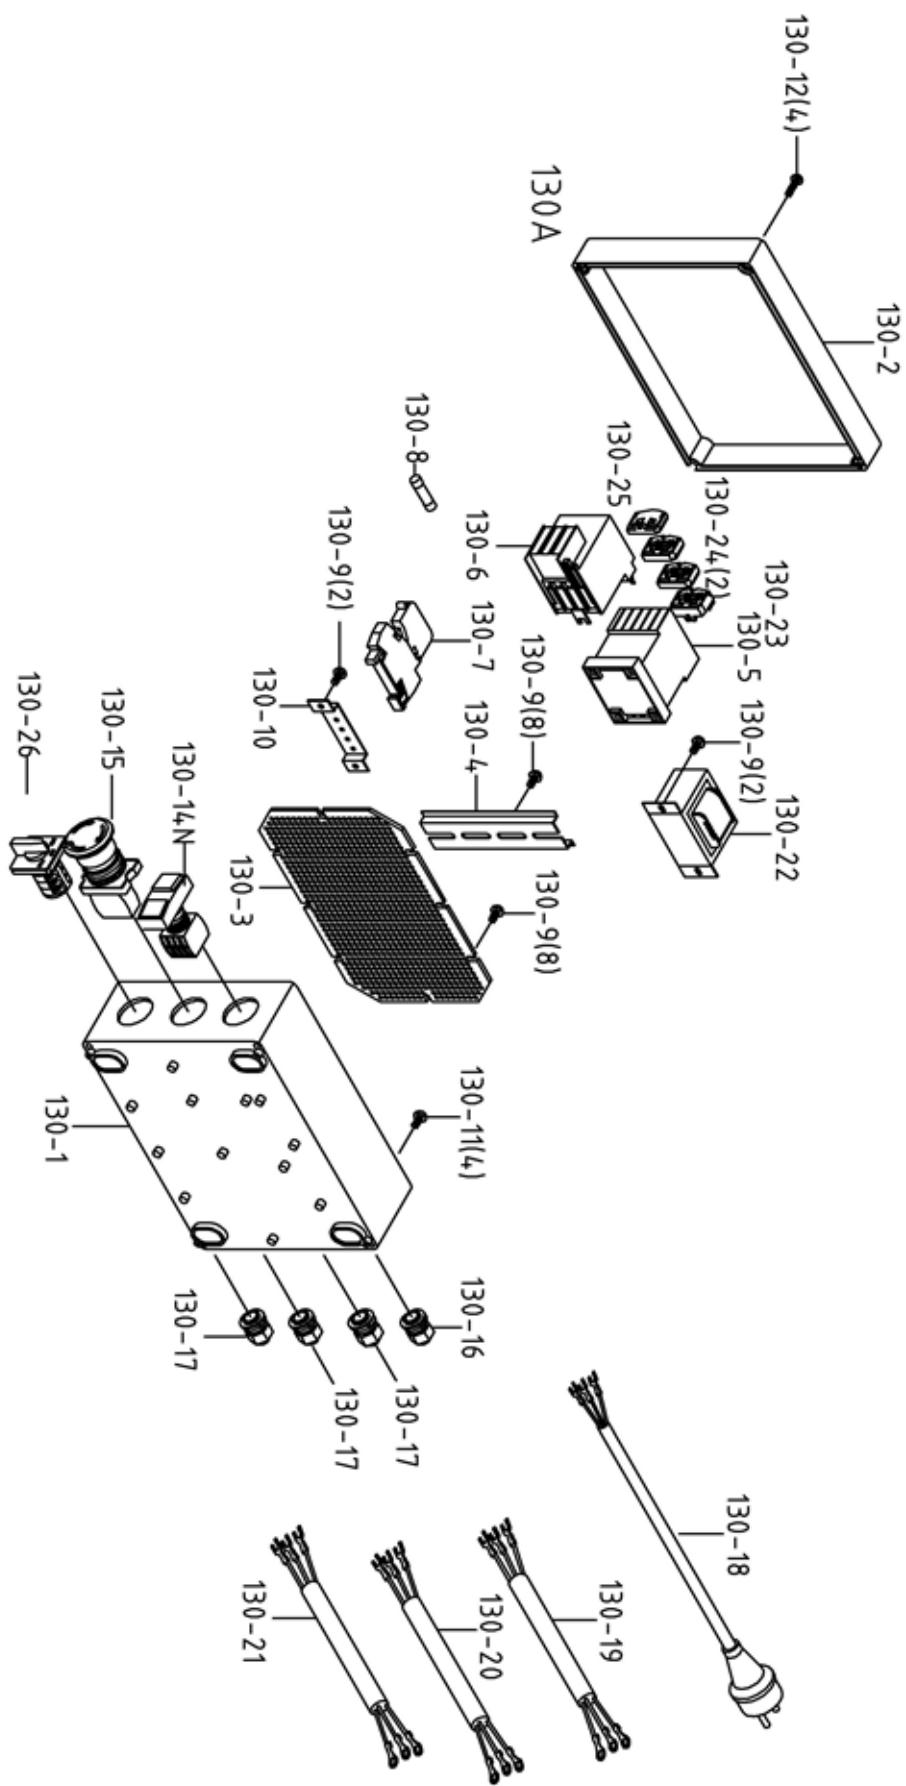


Parts List for the JMD-18, JMD-18PF CE Mill/Drill

| Index No. | Part No. | Description | Size | Qty. |
|----------------------|---------------------|--|-----------------------------------|-------------|
| 130-1 | JMD18-130-1E | Box Base | | 1 |
| 130-2 | JMD18-130-2E | Box Cover..... | | 1 |
| 130-3 | JMD18-130-3E | Base Plate | | 1 |
| 130-4 | JMD18-130-4E | Bracket | | 1 |
| 130-5 | JMD18-130-5E | Contactor..... | | 1 |
| 130-6 | JMD18-130-6E | Overload..... | | 1 |
| 130-7 | JMD18-130-7E | Fuse Bracket | | 1 |
| 130-8 | JMD18-130-8E | Fuse | 2A..... | 1 |
| 130-9 | JMD18-130-9E | Pan Head Screw..... | #8 x 1/4" L | 20 |
| 130-10 | JMD18-130-10E | Ground Plate | | 1 |
| 130-11 | JMD18-130-11E | Pan Head Screw..... | 3/16" x 5/16" L | 4 |
| 130-12 | TS-1532042 | Pan Head Screw..... | M4 x 12L..... | 4 |
| 130-13 | JMD18-130-13E | Start Push Button (Ser No.13032729 and lower) (not show) | | 1 |
| 130-14 | JMD18-130-14E | Stop Push Button (Ser No.13032729 and lower) (not show) | | 1 |
| 130-14N | JMD18-130-14EN | Start/Stop Compound Switch (Ser No.13032730 and higher) | | 1 |
| 130-15 | JMD18-130-15E | Emergency Stop Button | | 1 |
| 130-16 | JMD18-130-16E | Wire Plug..... | PG13.5 | 2 |
| 130-17 | JMD18-130-17E | Wire Plug..... | PG11 | 3 |
| 130-18 | JMD18-130-18E | Power Cable w/ Plug..... | H07RN-F, 3G1.5mm ² .. | 1 |
| 130-19 | JMD18-130-19E | Motor Cable..... | H05VV-F, 3G1.5mm ² .. | 1 |
| 130-20 | JMD18-130-20E | Limit Switch Cable | H05VV-F, 2G0.75mm ² .. | 1 |
| 130-21 | JMD18-130-21E | Light Cable | H05VV-F, 2G0.75mm ² .. | 1 |
| 130-22 | JMD18-130-22E | Transformer..... | 20VA | 1 |
| 130-23 | JMD18-130-23E | Trip..... | | 1 |
| 130-24 | JMD18-130-24E | Trip..... | | 2 |
| 130-25 | JMD18-130-25E | Trip..... | | 1 |
| 130-26 | JMD18-130-26E | Cam Switch | | 1 |

350018M 350051M

1~230V,50Hz 1~230V,50Hz

| | colour of strands | Litzenfarben | couleur des cordons |
|------|-------------------|--------------|---------------------|
| BK | black | schwarz | noir |
| WH | white | weiß | blanc |
| BU | blue | blau | bleu |
| YE | yellow | gelb | jaune |
| RD | red | rot | rouge |
| BN | brown | braun | brun |
| GY | grey | grau | gris |
| GNYE | green-yellow | grün-gelb | vert-jaune |
| OG | orange | orange | orange |
| VT | violet | violett | violet |

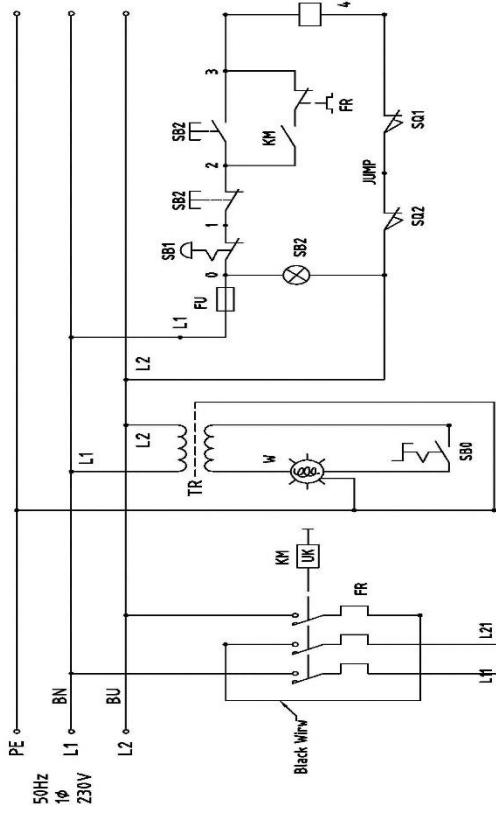

| | meaning of symbol | Bedeutung der Zeichen | Interpretation |
|--------|--------------------------|------------------------------|-------------------------------------|
| M | main motor | Hauptmotor | moteur principal |
| W | work lamp | Maschinenleuchte | lampe |
| SB0 | work lamp switch | Maschinenleuchte | lampe |
| SB1 | emergency stop switch | Not-Aus Schalter | arrêt d'urgence |
| SB2 | Start/Stop Switch | Start / Stopp-Schalter | Interrupteur marche / arrêt |
| C | contactor for main motor | Haupschütz | contacteur moteur |
| E | condenser | Kondensator | condensateur |
| F | electronic unit | Elektronik Einheit | unité électronique |
| RS | reversing switch | Sicherung | fusible |
| CS | centrifugal switch | Drehrichtungsschalter | commu. droite/gauche |
| OL | overload cut-off | Fliehkraftschalter | déclencheur centrifuge |
| LS,LS1 | limit switch | Überlastschutzschalter | déclencheur surcharge |
| TR | Transformer | Positionsschalter | micro |
| SA1 | Cam Switch | Transformator Nockenschalter | Transformateur Commutateur à camées |

